

QUICK START GUIDE

In the Box » iAV2v2 » USB cable » Universal voltage adapter » Docking adapter

1 Clock Setting Button

Press and hold for 2 seconds until clock starts flashing to start clock setting. Adjust with +/- Buttons. Press again to complete clock setting.

NOTE: Alexa cannot set clock

2/3 +/- Setting Buttons

Press and release to adjust clock during setting (hold for rapid adjust)

4 Dimmer Button

Press and release to adjust display brightness from high to off.

5 Backup Battery Compartment

Unscrew door with Phillips screwdriver. Insert 1 CR2450 battery as shown to maintain clock setting during power interruption.

6/7 AC adapter/DC Jack

 
Connect the included AC adapter to the DC jack located on the back of the unit and connect the other end to a working wall outlet.

8/10 USB Charging Ports


Connect a standard USB cable (not included) to charge mobile devices.

» **TIP:** Press the + and - Buttons on iAV2v2 together during clock setting to switch display from standard 12 hour to 24 hour display.

TOP
Amazon Echo Device Dock




BOTTOM

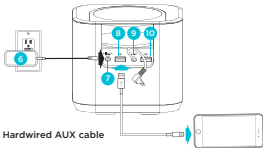 

9 Hardwired AUX cable


WHICH AMAZON ECHO DEVICE DO YOU HAVE?

 Docking Your Amazon Echo Dot



- » Remove the included Echo Input adapter. Align the rear of the Echo Dot (the side with the USB port and Aux Jack) with the opening in the iAV2v2 dock well and place with the ports facing the back.

 Docking Your Amazon Echo Input



- » Separate the two-piece Echo Input adapter, then place the Echo Input between the top and bottom adapters, leaving the connector ports accessible on the back. Close the adapter by lining up the printed arrows. Insert into the iAV2v2 dock as shown above, and gently push into place.

Powering Your Amazon Echo Device



- » **For Echo Dot:** Connect the included USB cable to USB Charge Port 8 on the iAV2v2.
- » **For Echo Input:** Connect the USB cable to USB Charge Port 10 on the iAV2v2.
- » Connect the other end of the cable to the USB port on your Echo device.
- » Connect the AC power adapter to the DC jack.

Playing Audio On Your Echo Device



- » Connect the built-in Aux-in cable ② on the back of the iAV2v2 to the Aux jack of your Echo device.
- » You can now ask Alexa to access all the functions of your Echo device and hear the audio through the iAV2v2.

VOLUME CONTROL

- » **For Echo Dot:** Adjust the volume on the Dot to your desired level.
- » **For Echo Input:** Ask Alexa to adjust the volume to your desired level.

"Alexa, stop"

"Alexa, mute" or "Alexa, unmute"

"Alexa, set volume to 5"

 
"Alexa, turn up/down the volume"

- » **TIP:** You can also use the Alexa app to adjust the volume on your Amazon Echo devices.

Troubleshooting for Low Audio:

- » Make sure that the 3.5mm audio cable is fully inserted into the Echo Dot.
- » Make sure that you raise the volume on your Echo Dot.
- » Make sure that you raise the volume on your phone.

THE DISPLAY



- » **NOTE:** Backup battery only maintains clock settings during a power interruption. Unit does NOT operate on battery.

FCC Information

Model: iAV2v2

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

Canada Statement

This device complies with Industry Canada's licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage;
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.
l'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

WARNING/DISPOSAL OF UNIT

To dispose of the unit, follow the instructions below:

- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations.
- Many electronics retailers now recycle batteries and other electronic components at no charge.

GENERAL BATTERY PRECAUTIONS

- Never use or charge a battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
- Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substances.
- Never expose a battery to any liquid.
- Never expose a battery to excessive heat such as direct sunlight or fire. Never use a battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
- Always keep batteries out of the reach of infants and small children.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement."
2. Cleaning – The unit should be cleaned only with dry cloth. Do not use solvents, etc"
3. Ventilation – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings."
4. Heat – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat."
5. Only use attachments/accessories specified by the manufacturer."
6. Lightning and Power Surge Protection – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges."
7. Damage Requiring Service – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally"
8. No naked flame sources, such as lighted candles, should be placed on the apparatus"
9. Attention should be drawn to the environmental aspects of battery disposal."
10. CAUTION – Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type."
11. The power adapter, used as the disconnected device, It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket."

WARNING



Do not ingest the battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



For warranty and full instructions
visit: www.ihome.com/support

© 2018 SDI Technologies, Inc. All rights reserved.
Questions? Visit www.ihome.com
or call 1-800-288-2792 Toll Free