iHome FIT

iR80

Water-Resistant Wireless Sport Earbuds

mic+remote • flexible neckband • noise isolating

User Manual CHARGE **BEFORE** USF

Bluetooth

Note: Noise isolation ear buds such as the iB80 are designed to block background sounds so that you can enjoy your music without extraneous noise. You should not use noise isolation ear buds like the iB80 in situations that require you to hear and be aware of warning sounds

Note: In extremely cold weather you might feel a slight tingling sensation in your ears when wearing noise isolation ear buds. This is caused by a build-up of static electricity in your body and not an indication of any problem with your ear buds.

OPERATING INSTRUCTIONS

1. Power On / Auto-Linking Mode

PRESS and HOLD the Multi-Function Button (MFB) on the right ear-piece for approximately 2 seconds until you hear the four ascending beep tones that indicate the power is 'On'. The blue LED begins flashing slowly indicating that your ear buds are in the Auto-Linking Mode and trying to re-link to a previously paired device as long as that device is within the normal pairing range of approximately 33-feet. If your ear buds do not find a previously paired device that is in range and turned 'on' within 3 minutes they will switch from the Auto-Linking mode to the Power 'Off' mode to extend the battery

2. Power Off

To shut the power 'Off' at any time PRESS and HOLD the Multi-Function Button (MFB) on the control dongle for approximately 2 seconds. You will hear four descending beep tones, the red LED flashes once and then the power shuts off.

3. Manually Pairing Your iHome Ear buds With Your Bluetooth Device

NOTE: Your ear buds must be 'Off" to begin the manual pairing process With the ear buds in the 'Off' mode, PRESS and HOLD the Multi-Function Button (MFB) on the control dongle for approximately 4 seconds until you see the LED indicator alternately flashing blue and red. Release the Multi-Function Button (MFB)

Make sure that your Bluetooth device is turned 'On' and in the Pairing mode. Refer to the instructions supplied with your device if necessary. When your device "finds" the iB80 ear buds, you will see "iHome iB80" appear on your devices Bluetooth menu screen together with the words "Not Paired", "Not Connected" or similar. Touch "iHome iB80" to complete the pairing process. You will hear a single beep, and you will see "iHome iB80 Connected" on your devices Bluetooth menu. NOTE: If your Bluetooth device asks for a Password or a PIN to complete the pairing process, enter "0000" on the keypad of your device

You are now ready to begin streaming music wirelessly from your Bluetooth device to your iHome iB80 Bluetooth ear buds

5. Using Your iHome Bluetooth Ear buds

The chart on Page 3 explains the basic functions and operations of your Bluetooth ear buds.

2


Introduction

EN

Your new iHome FIT Bluetooth stereo ear buds are designed to link with your Bluetooth enabled smartphone or music player to allow you to wirelessly listen to music and answer phone calls within the normal 10 meter (33 feet) Bluetooth operating range

Your ear buds are supplied with 3 sizes of ear cushions for maximum wearing comfort and stability during all kinds of exercise and physical activities. They are also rated as IPX3 for splash resistance so you may use them in the rain without causing any damage, but please note that they are not designed for use while swimming and they should not be submerged

Please review this manual carefully to make sure you are getting the maximum benefit from all of the features of your new ear buds, and keep this manual for future reference.

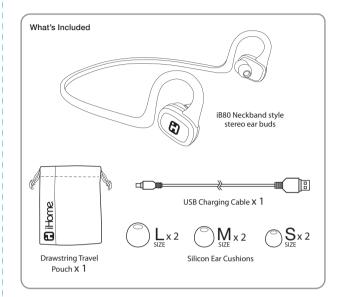

Function	Action Required
Turn Ear buds 'On'	When Ear Buds are 'Off', press and hold the MFB for 2 seconds until you hear the 4 ascending beep tones. The LED indicator flashes blue.
Enter Pairing Mode	When Ear Buds are 'Off', press and hold the MFB for 4 seconds until you see the LED indicator alternately flashing red and blue.
Pairing	Make sure your Bluetooth device is 'On' and discoverable. When "iHome iB80" appears on your device's menu, select it to complete pairing.
Play / Pause	Short press the MFB to start playback. Short press to pause playback. Short press to resume playback.
Skip to next track	Short press the "+" button during playback
Skip to beginning of current track	Short press the " - " button during playback
Skip to beginning of previous track	Short press the " - " button twice during playback
Increase volume	Press and hold the "+" button during playback
Decrease volume	Press and hold the " - " button during playback
Answer an incoming phone call	Short press the MFB when you hear the incoming ring sound. NOTE: Music will automatically pause when you are answering a call and resume when you end the call.
Decline an incoming phone call	Press and hold the MFB for 1 - 2 seconds to decline the incoming call.
End a call	Short press the MFB to end the call and 'hang up'.
Transfer a call between the phone and the ear buds	While the call is in progress double press the MFB to transfer the call between the phone and the ear buds.
Last number redial	When phone is paired with ear buds but no call is in progress, double press the MFB to redial the last number.
Turn ear buds 'Off'	Press and hold the MFB for 2 seconds until you hear the 4 descending beep tone The LED indicator turns red and then shuts off.
Clear the paired device list (Factory Reset)	Press and hold the MFB and the "-" buttons together for 5 seconds to clear the paired device list. All previously paired devices will be disconnected.

Lithium-ion Battery

Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If the battery does not recharge, please contact Customer Service at 1-800-288-2792. WARNING/DISPOSAL OF UNIT

Please do NOT attempt to change the battery yourself. Doing so may damage the unit and will void the warranty. If discarding, follow the disposal instructions below: Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.

 Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge. Check to see which ones in your area do so.

CAUTION:

The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal.


Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline

Solution or other electrolytic substance. Always confirm that the temperature is 5°C - 35°C (41° - 95° Fahrenheit) before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded.

Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.

PREPARATION FOR USE

1. Location of Controls and Indicators

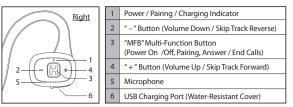

2. Charging Your Ear buds

Your ear buds are powered by a rechargeable lithium-ion battery. Although the battery was fully charged when the ear buds left our factory, like all batteries it can lose power even during periods of non-use. We recommend that you charge the ear buds for 3 hours before first use to make sure the battery is fully charged before you start using your ear buds

To charge the battery, open the water resistant cover and connect the smaller plug on

the supplied USB charging cable to the USB charging port on the ear buds. Refer to the illustration. Please note that the plug can only be inserted into the charging port one way. To avoid damaging the charging port make sure that you are inserting the plug correctly. Connect the larger plug of the supplied USB charging cable to a USB/AC adapter (not included) or to the powered USB port on a laptop or personal computer

The LED indicator will glow red when your ear buds are charging and will turn 'Off' when your ear buds are fully

3. Wearing Your Ear Buds

charged.

The two ear-pieces are marked 'L' and 'R'. When worn properly the neckband will be positioned behind your neck and the controls will be on your right side.

The 'M' size tips were installed on the ear buds at our factory. If you wish to change to either the 'S' or 'L' size tips, simply pull the 'M' size tips off the ear-pieces and push the 'S' or 'L' size tips on to the tubes, making sure that they are firmly seated on the tubes so that the tips do not come off when you remove the ear-pieces from your ears. Refer to illustration



FCC Information

iB80-031016-A (EN)

FCC ID:EMOIB80 IC:986B-IB80 Declaration ID D023990

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and

1

(2) this device must accept any interference, including interference that may cause undesired operation of the device

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. • NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

Advice, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy

and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. CAN ICES-3 (B)/NMB-3(B)

Limited One-Year Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and condi

product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions. Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It Note: Inits wail and in the products back to the purpose or willful that actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you pony our transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2016 SDI Technologies, Inc. All rights reserved. Questions? Visit www.ihome.com or call 1-800-288-2792 Toll Free

Printed in China

- Never expose the battery to any liquid.
- · Always keep the battery out of the reach of infants and small children.

3