
# POWERCLOCK GLOW

Bluetooth Speaker + USB Charging

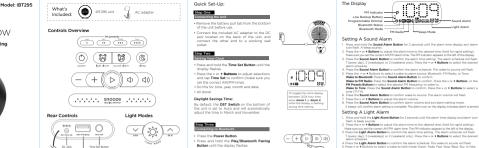

Quick Start Guide Questions? Visit ihome com



### Sleen Mode

- 1. Press the Sleep Button as needed to cycle to the desired sleep timer duration: 120, 90,
- 2. Press and release the Sleep Button during Sleep Mode to review the remaining sleep

### Using Light Modes

Press the Light Mode Button repeatedly to cycle through 6 different modes:



Use DIM Buttons to adjust the brightness. Beat Light Mode will pulse to music only when the unit is in Bluetooth mode.

### EM Radio + Presets

Extend the radio antenna for best reception. Press a FM Preset Button (1-4) to turn on the radio and use the - or + Buttons to select a frequency.

- 1. Press the or + Buttons to tune the radio to the desired station (hold to scan for the next
- 2. Press and hold a FM Preset Button (1-4). 2 beeps will sound to confirm the preset has
- 3. Press an FM Preset Button (1-4) to listen to a preset FM station at any time.

### Charging Devices Via USB Port

1150 /

- 1. Connect the standard size and of a USB cable (not

device using the charger that came with it.

Press Light Mode to cycle through colors

Use DIM Buttons to adjust the brightness

Backup Battery

 
### Battery Back-Up

The unit uses a CR-2450 back-up battery to provide continuous alarm operation and clock battery. The battery compartment is located on the bottom of the unit.

- 1. Make sure the AC adapter is connected, or you will lose 2. Use a Phillips screwdriver to open the battery compartment

### WARNING A

· Do not ingest the battery, Chemical Burn Hazard. This product contains a coin/button cell



### Maintenance

- · Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- · Protect your furniture when placing your unit on a natural wood and lacquared finish.
- · Clean your unit with a soft cloth moistened only with mild soap and water. Stronger clearing agents such as thinner or similar materials can damage the surface of the unit.

### IMPORTANT SAFETY INSTRUCTIONS

· Select 'Home iBT295' from your Bluetooth

device's menu to connect.

- Please heed all warnings, read and follow all instructions and keep these instructions handy
- 1. Do not use this product near water, and clean only with dry cloth.
- 2. Do not block any ventilation openings. Install in accordance with the manufacturer's
- 3. Heat This product should be situated away from heat sources such as radiators, heat
- 5. Unplug this product during lightning storms or when unused for long periods of time.
- 6. Damage Requiring Service This product should be serviced by qualified service personnel

- Objects have fallen into or liquid has been spilled into the enclosure. The unit exhibits a marked change in performance or does not operate normally
- 7. No naked flame sources, such as lighted candles, should be placed on this product.
- 9. This product is suitable for use in tropical and/or moderate climates
- 11. Do not dispose of batteries in the household trash or fire.

### FCC INFORMATION

Press the Light Alarm Button to confirm alarm settings and exit alarm setting mode. Deeps will confirm alarm settings in confirm alarm settings and exit alarm setting mode.

- L'apparei ne doit pas produire de brouilage; L'apparei doit accepter tout brouilage; L'apparei doit accepter tout brouilage radioNectrique subi, même si le brouilage est susceptible d'en

### **Dreviewing the Alarm**

Linht Alerm

Press and release the Light Alarm Button or Sound Alarm Button to view the current alarm settings

### Turning the Alarm On/Off

1. Press and release the corresponding Alarm Button (Light or Sound) twice within 5 seconds to topole the alarm ON and OFF. indicated by the related white alarm indicator. 2. When the alarm sounds, mass the corresponding Alarm Batton (Light or Sound) or the Power Botton to disable the alarm and reset it to come on at the same time the next

### Snooze/Display Dimmer

Snooze: When the alarm is sounding, press the Snooze/Dimmer Button to snooze for 9

Dimmer: Press the Snooze/Dimmer Button (when alarm is NOT sounding) to adjust display brightness

### Programmable Snooze and Dimmer

Adjust the shorte duration and set a schedule for your clock backlight to extrematically dim and brighten at certain times of the day.

- 1. Press and hold the Spoore/Dimmer Batton until the display starts to flash
- 2 Use the tion a Buttom to adjust the space charation from 1.20 minutes. Press the Snooze/Dimmer Buttons to adjust the shooz

### Now it's time to set the display dimmer schedule:

ONE YEAR LIMITED WARRANTY

- 3 Live the + or Buttons to set the AUTO dimmer to ON or OFF. Press Snooze/Dimmer Button to confirm. (Note: Choosing OFF will simply exit the setting.)
- 4 Use the t or a Buttom to choose the RDIGHTNESS level for destine hours. Dress Secone/Dimmer Button again to confirm
- 5. Use the +/- Buttons to set the TIME you want the daytime dimmer to take effect. Press Snooze/Dimmer Button again to confirm
- 6.Use the +/- Buttons to choose the BRIGHTNESS level for nighttime hours. Press. Stoore/Dimmer Button again to confirm
- 7. Use the +/- Buttons to set the TIME you want the nighttime dimmer to take effect. Press Snooze/Dimmer Button again to confirm
- 8 Done! The @ icon will appear on the display when Dimmer Schedule is active.

### contractors, resellers, their officers, directors, shareholders, members or agents be liable actual, exemplary or punitive damages.

demages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your (money order, cashier's check, or credit card) for purchase of your SDI product.

reason of any defect or malfunction during the warranty period. SDI will repair or, at its

discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center

authorized by Customer Service. If service is required, please contact Customer Service at ihomeaudio.com/support/con-

tact to obtain a Return Authorization Number and shipping instructions. A copy of the

NOTE: This warranty is valid only if the product is used for the purpose for which it was

designed. It does not cover (i) products which have been damaged by negligence or

damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of

## # 2020 SDI Technologies, Inc. All rights reserved.

