Size: 280 x 160 mm (folded: 140 x 160 mm)

Color: print Black and PMS 7694C (2C + 1C) in white card

Material: 260gsm Art Card

Feb. 21, 2017

Back

FCC Information

FCC Radiation Exposure Statement

BC he device has been evaluated to meet general RF exposure requirement. he device can be used in portable exposure condition without restriction

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
 These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

nsult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B) Canada Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

1) This device may not cause interference; and

(1) This device may not cause interrerence; and (2) This device may not cause interrerence; and (2) This device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage;
 (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf. l'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

Internal Rechargeable Lithium-ion Battery

This device uses an internal non-replaceable rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it for an extended period of time and try resetting the unit. If this fails, contact Customer Service at 1-800-288-2792

WARNING/DISPOSAL OF UNIT

Do NOT attempt to change the battery. Doing so will void the warranty and could cause injury and damage to your device. To dispose of the unit, follow the instructions below:

- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
 Always dispose of used batteries/electronics in accordance with the prevailing community regulations.
 Many electronics retailers now recycle batteries and other electronic components at no charge.
 GENERAL BATTERY PRECAUTIONS

- Never use or charge a battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
 Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substances.
 Avoid charging a rechargeable battery when the temperature is not within 5°C 35°C (41° 95° Fahrenheit).
 Never expose a battery to any liquid.
 Never expose a battery to excessive heat such as direct sunlight or fire. Never use a battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
 Always keep batteries out of the reach of infants and small children.

- IMPORTANT INFORMATION ABOUT WATERPROOF OPERATION

 The unit is IP67 waterproof rated, meaning it is immersible for up to 30 minutes at a depth of 1 meter (3 feet). It will typically withstand rain, snow and being submersed in shallow water. Longer duration or deeper immersion that exceeds the tested limits may cause product failure and void the warranty.
- DO NOT immerse the unit in water for extended periods.

 DO NOT immerse the unit in water deeper than 1 meter (about 3 feet).
- Make sure cover and surrounding surfaces are completely dry before opening cover to prevent moisture from damaging the internal electronics.
 Keep rubber cover free of dirt, sand, or other objects that can interfere with proper sealing. If for any reason the waterproof
- cover is not making a tight waterproof seal water may enter the unit
- Rinse with tap water after immersion in salt water or swimming pool.
 DO NOT clean unit with oily soaps or use chemicals or solvents. Clean with damp cloth.

Model: iBT374

FCC ID:EMOIBT374

IC:986B-IBT374

Cover




Color Changing Rechargeable Bluetooth Speaker with Speakerphone

Model: iBT374

QUICK START GUIDE



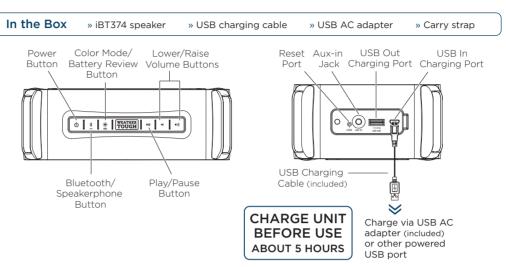

BLUETOOTH: PAIRING & PLAYING

Pairing the First Time

Manual Pairing









» Make your Bluetooth device "discoverable".

- » Press and hold Power Button for 2 seconds to turn speaker ON. » The first time the unit is powered on it will enter auto-pairing mode.
- » To manually pair, press and hold Bluetooth Button for 2 seconds.
- » Select "iHome iBT374" on your device's Bluetooth menu to complete pairing.
- » Press the Play/Pause Button to play/pause music.

inside - P.1

inside - P.2

SPEAKERPHONE

Answer Call





End Call







- » The speaker must be on and connected with a paired Bluetooth device to receive calls.
- » When a call is received, playing music is muted to hear the ring tone. Press the Bluetooth/Speakerphone Button to answer call.

For call waiting function, use phone controls on your device.


» Press the Bluetooth/Speakerphone Button again to end call and resume previous function.

WIRELESS STEREO


» Link two iBT374 units (second speaker sold separately) for stereo sound.

Power On + Pair -



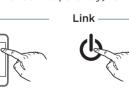



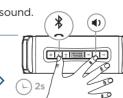



SPEAKER ONE THEN TWO

- » Power ON one iBT374 speaker.
- » Press and hold the Bluetooth/Speakerphone Button on this speaker for 2 seconds and select "iHome iBT374" on your mobile device to pair it.
- » Power ON second iBT374 speaker.
- » Press and hold the Bluetooth/Speakerphone Button and the Volume Down Button together at the same time on the 1st speaker then repeat on the 2nd speaker. The cabinet lights will blink and a voice will announce "Connected" from each speaker.

You are now ready to play audio through both speakers.

VOICE COMMANDS

- » NOTE: The unit must be powered on and linked to a Bluetooth phone to use voice commands.
- » Press and hold the ▶ Play/Pause to access the voice command protocol associated with your device's operating system (Siri for iOS devices, "OK, Google" for Android devices, etc.)

COLOR CHANGING MODES



SLOW >> FAST >> FREEZE COLOR PULSE TO MUSIC » PRESET PULSE » OFF

AUX IN

» Connect standard audio cable (not included) to aux in jack, then to headphone jack on audio device. Make sure Bluetooth audio is not playing or you will not hear aux audio.

REVIEWING BATTERY LEVEL

» When unit is ON but not charging (operating on battery, micro USB cable not connected) you can review the current battery status on the Battery Status Indicator Lights (four LEDs on front of the unit) any time a button is pressed. Press and hold Battery Review **Button** to hear battery level announcement.

(no charge)

(needs charging)


Battery Battery good Battery


USING THE USB OUT CHARGING PORT

» When unit is operating on battery (NOT connected to power source via USB in port), connect a standard USB cable to the 1 Amp USB out charging port power bank and the other end to the desired USB device. Observe charging status on device.

WATERPROOF OPERATION

» For proper waterproof operation, make sure the waterproof cover on the right side of the unit is completely flush with the unit by pressing along the entire edge of the cover until it is completely and securely in place.

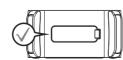

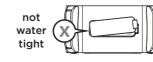

Contact Us: 1 • 800 • 288 • 2792

For full warranty and full instructions visit: www.ihome.com/support

