Model: iBT72 (Front) IB (English) Size: 324Wmm x 200Hmm Color: Print in Black color

Date: Oct. 3, 2014

iHome

For Models That Use Lithium Batteries

- · Lithium batteries can explode or cause burns if disassembled, shorted, recharged, exposed to water, fire, or high temperatures & not handled appropriately
- Do not place loose batteries in a pocket, purse, or other container containing metal
- objects, do not mix with used or other battery types, or store with hazardous or combustible materials.
- Store in cool, dry, ventilated area.
- Follow applicable laws and regulations for transport and disposal.

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the

- Water and Moisture The unit should not be used near water. For example: 1. near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement
- Ventilation The unit should be situated so that its location or position does 2. not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or abinet, which may impede the flow of air through the ventilation openings.
- З. Heat - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce
- **Power Sources** The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. 4.
- Power-Cable Protection Power supply cables should be routed so that 5. they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit
- to where it is plugged into an AC socket. Cleaning The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions. Objects and Liquid Entry Care should be taken so that objects do not 6.
- 7. all and liquids are not spilled into any openings or vents located on the product
- Attachments Do not use attachments not recommended by the product
- 9. Lightning and Power Surge Protection Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will
- prevent damage to the product due to lightning and power-line surges. 10. **Overloading** Do not overload wall sockets, extension cords, or integral
- convenience receptacles as this can result in a risk of fire or electric shock. 11. **Damage Requiring Service** The unit should be serviced by qualified service personnel when:
 - the power supply cable or plug has been damaged. objects have fallen into or liquid has been spilled into the enclosure.
 - B the unit has been exposed to rain.
 - the unit has been dropped or the enclosure damaged.
- the unit exhibits a marked change in performance or does not operate
- 12. Periods of Nonuse If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
- 13. Servicing The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel

Maintenance

- · Place the unit on a level surface away from sources of direct sunlight or excessive heat. • Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- · Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents such as thinner or similar materials can damage the surface of the unit.

Limited 1 Year Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warrantv

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2014 SDI Technologies, Inc. All rights reserved

Questions? Visit www.ihome.com or call 1-800-288-2792 Toll Free

iBT72-140411-A



BEFORE

FCC Information

antenna or transmitter

the following two conditions:

operation of the device.

exposure and compliance.


cause undesired operation.

connected

IMPORTANT

Printed in China

If you have any question regarding the operation or use of this product, please visit **www.ihome.com** to view answers to frequently asked questions. To learn more about this and other iHome products, please visit us online at www.ihome.com

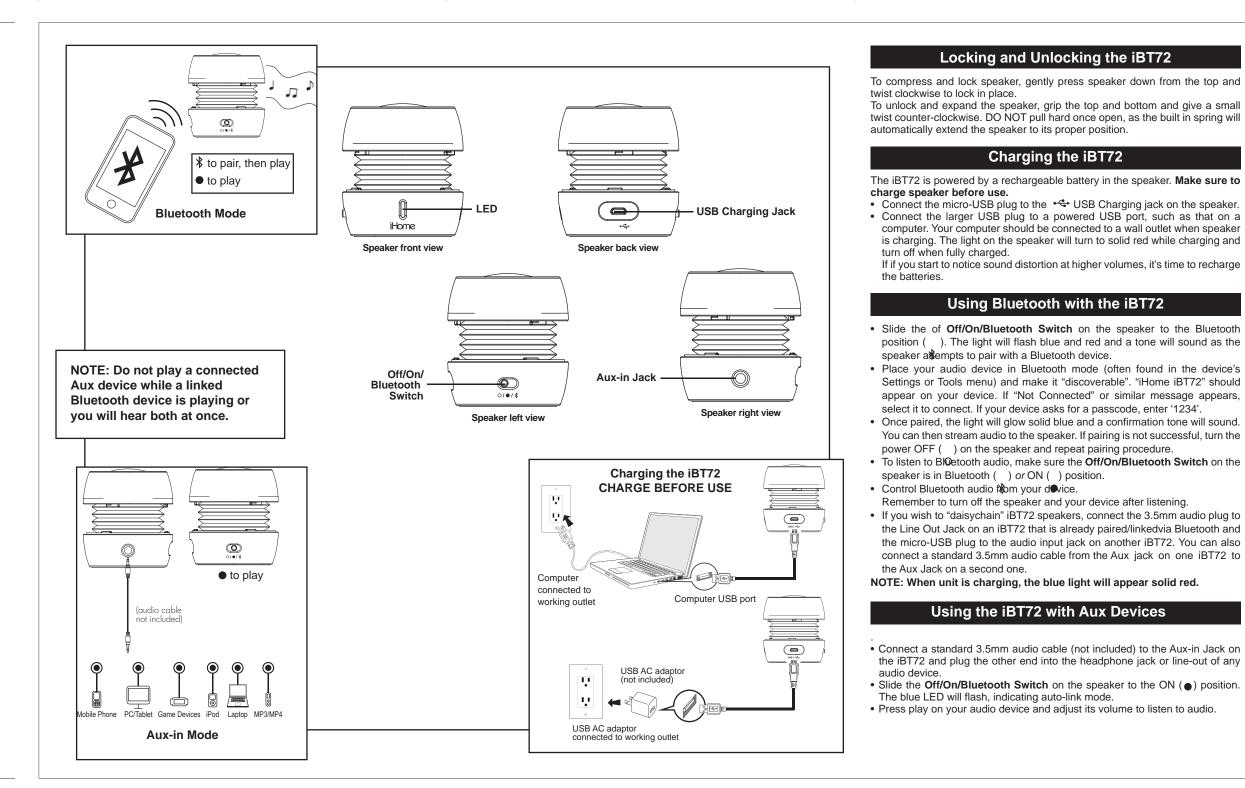

Model: iBT72 (Back) IB (English) Size: 324Wmm x 184Hmm Color: Print in Black color Date: Oct. 3. 2014

Locking and Unlocking the iBT72

To compress and lock speaker, gently press speaker down from the top and

Charging the iBT72

• Connect the larger USB plug to a powered USB port, such as that on a computer. Your computer should be connected to a wall outlet when speaker is charging. The light on the speaker will turn to solid red while charging and

If if you start to notice sound distortion at higher volumes, it's time to recharge

Using Bluetooth with the iBT72

• Slide the of Off/On/Bluetooth Switch on the speaker to the Bluetooth position (). The light will flash blue and red and a tone will sound as the

• Place your audio device in Bluetooth mode (often found in the device's Settings or Tools menu) and make it "discoverable". "iHome iBT72" should appear on your device. If "Not Connected" or similar message appears,

You can then stream audio to the speaker. If pairing is not successful, turn the

the Line Out Jack on an iBT72 that is already paired/linkedvia Bluetooth and the micro-USB plug to the audio input jack on another iBT72. You can also connect a standard 3.5mm audio cable from the Aux jack on one iBT72 to

• Connect a standard 3.5mm audio cable (not included) to the Aux-in Jack on the iBT72 and plug the other end into the headphone jack or line-out of any