

## Snooze/Display Dimmer

- To program Snooze, press and hold the Snooze/Display Dimmer during normal operation (when no alarm is sounding).
- Press the or + Buttons to select the desired snooze time (between 01 and 29 minutes). 3. Press and release the **Snooze/Display Dimmer Button** to confirm Snooze setting. 2 beeps will sound.
- 4. While the alarm is sounding, press and release the **Snooze/Display Dimmer Button** to temporarily silence the alarm for the set duration (9 minutes is the default). Snooze can be used several times during the 1 hour alarm sounding time.
- To adjust the brightness of the display, press and release the Snooze/Display Dimmer **Button** during normal operation (when no alarm is sounding) to cycle through the brightness display settings (Hi, 3, 2, Lo, and Off).

### Manual Bluetooth Pairing

- Press and hold the **Bluetooth Button** on the back of the iBTW39v2 for 2 seconds. "PAIR" will appear on the display and the Bluetooth indicator will flash blue.
- 2. Select 'iHome IBTW39v2' on your device's Bluetooth menu to connect device. If pairing is successful, a voice prompt will announce 'CONNECTED' and the Bluetooth indicator will appear solid blue, indicating the iBTW39v2 is ready to play audio. Once the iBTW39v2 is paired to a device, it will attempt to autolink when the device is within range (about 33 feet). To reset Bluetooth, press and hold the Bluetooth Buttonfor 10 seconds.

## Playing Audio Via Bluetooth

- 1. "bt" and the  $\mathbf{x}$  Bluetooth indicator appear on the display when the unit is on and your device is connected. Press the **Button** on the unit to play or pause audio from your linked Bluetooth device.
- 2. Press the or + Buttons to adjust the volume on the unit.

### Using Speakerphone

The unit must be powered on and linked to a Bluetooth phone to receive a call.

- 1. When a call is received, playing music is muted to hear the ring tone.
- "Call" will flash on the display.
- Press the ▶ **Button** to answer the call;

**Press and hold** the **Button** to ignore the call.

2. Press the **Button** to end the call and resume previous function.

## Using Voice Control

NOTE: The unit must be powered on and linked to an iOS or Android Bluetooth device to use Voice Control. *Press and hold* the **Button** for 2 seconds. 'CALL' will appear on the display. Wait for a beep to activate voice control with Siri or Google Assistant

Voice control requires an active internet connection on connected Bluetooth device with iOS 10 and Android 4.1 and later. When activated, the speaker microphone acts as an extension of the microphone in your smartphone to make/take calls, enable you to ask Siri\*/Google Assistant™ to play music and more.

## Charging Devices Via USB Port

- 1. Connect the standard size end of a USB cable (not included) to the USB port on the back of the unit and connect the other end to the charging port on your device.
- Monitor the charging on your device. Some devices use a proprietary charging method and will not charge using the USB port. If this happens, you must charge your device using the charger that came with it.

**NOTE**: Unit must be plugged into working outlet to charge devices.

## Battery Back-Up

- door.

 
**WARNING:** Lithium batteries can explode or cause burns if disassembled, shorted recharged, exposed to water, fire, or high temperatures. Do not place loose batteries in a pocket, purse, or other container containing metal objects, mix with used or other battery types, or store with hazardous or combustible materials. Store in cool, dry, ventilated area. Follow applicable laws and regulations for transport and disposa

same or equivalent type.

## 

- ate medical attention

#### Maintenance



• Turn on your Bluetooth device and make it 'discoverable' by turning on Bluetooth mode


• Press the **Power Button** on the iBTW39v2. The first time the unit is powered on, it will automatically

• Select 'iHome iBTW39v2' on your device's


• Press and hold the Time Set Button until the

• Press the - or + Buttons to adjust selections and

This product can automatically change your clock in March and November for daylight savings time! To enable, hold the Time Set Button for a full 5 seconds

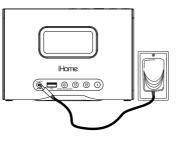



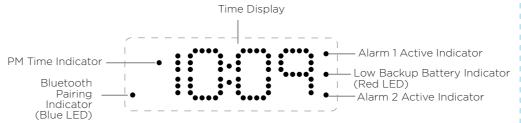

## Using Qi Wireless Charging

The Display

This unit will wirelessly charge Qi compatible wireless charging phones. Place Qi compatible device face up on charging rest.


Check the Wireless Charging Indicator on the iBTW39v2 for charging status:

LED glows solid amber for 10 seconds: Device is charging properly

Solid green LED: Device is charged. Rapid blinking amber LED: Device is not charging properly. Reposition device.

Note: The solid green LED may not glow when iOS devices are fully charged.

CAUTION: Remove metal protective or magnetic case from phone before charging. When charging phone, do not place magnetic-striped or other metal objects on the charger. Doing so could damage the object or this unit. Qi compatible phones with metallic looking finishes will charge normally.

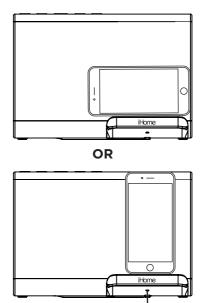

Wireless Charging Indicator

## Setting and Using the Alarms

This unit features dual alarms which can be set to different times and alarm sources. Each is set in the same way. Instructions are given as "Alarm Button"; use Alarm 1 or Alarm 2 located on the back of the unit to set respective alarms.

Note: Each step must be completed while display is flashing or the step will time-out in 10 seconds and will save current settings.

- 1. Press and hold the Alarm Button for 2 seconds until the alarm time display and alarm icon flash. A beep sounds 2. Press the - or + Buttons to adjust the alarm time to the desired time (hold for rapid
- Make sure you set the correct AM/PM alarm time. The PM indicator appears to the left of
- the time display; there is no AM indicator. 3. Press the **Alarm Button** to confirm the alarm time setting. The wake-to schedule will flash. Press the - or + Buttons to set the desired alarm schedule: 7 Days (every day), 5 Days (week days only) or 2 Days (weekends only).
- 4. Press the Alarm Button to confirm the alarm schedule. The wake source indicator will flash on the display. Press the - or + Buttons to select the desired wake to alarm source: "bt" (Bluetooth) or tone.

| Vake to Bluetooth: | You will wake to the cur |
|--------------------|--------------------------|
|                    | is detected, the alarm v |
| Wake to Tone:      | Press the Alarm Button   |
|                    | needed to listen to and  |
|                    | tones (t1 - t4).         |
|                    |                          |

- Press the Alarm Button to confirm the alarm source. The volume display will flash. . Press the - or + Buttons to adjust the alarm volume. Note that the alarm volume setting is stored separately from other volume settings.
- 7. Press the Alarm Button to confirm the alarm settings and exit alarm setting mode. 2 beeps will confirm alarm setting is complete. The alarm icon will remain on the display, indicating the alarm is armed.

#### Previewing the Alarm and Turning the Alarm On/Off

- . Press and release the Alarm Button to view the current alarm time
- 2. Press and release the Alarm Button as needed to toggle the alarm ON and OFF, indicated by the related white alarm indicator and a beep.
- 3. When the alarm sounds, press the **Power Button** or the corresponding Alarm Button (1 or 2) to disable the alarm and reset it to come on at the same time the next day.

The unit comes with a CR-2450 back-up battery installed to provide continuous alarm operation and clock settings in the event of a temporary power failure. Remove the battery pull tab before use. When the battery icon on the clock display is flashing, it is time to replace the back-up battery. The battery compartment is located on the bottom of the unit.

1. Make sure the AC adapter is connected, or you will lose your time and alarm settings during battery replacement 2. Use a Phillips screwdriver to open the battery compartment

3. Remove the exhausted battery from the compartment and insert 1 CR-2450 battery, checking that the + side is facing you. Replace the compartment door. Do not overtighten.



CAUTION - Danger of explosion if battery is incorrectly replaced. Replace only with the

• Do not ingest the battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immedi-

• Place the unit on a level surface away from sources of direct sunlight or excessive heat. • Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture. Clean your unit with a soft cloth moistened only with mild soap and water. Strong cleaning agents such as thinner or similar materials can damage the surface of the unit.

## **IMPORTANT SAFETY INSTRUCTIONS**

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Water and Moisture The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation The unit should be situated so that its location or position does not interfere with its proper ventilation For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings
- Heat The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Only use the AC adapter that came with the unit.
- Power-Cable Protection Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- 6. Cleaning The unit should be cleaned only as recommended. See the Maintenance section for cleaning instruc-
- Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any
  openings or vents located on the product.
- Attachments Do not use attachments not recommended by the product manufacturer.
- Lightning and Power Surge Protection Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
- 10. Overloading Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 11. Damage Requiring Service The unit should be serviced by gualified service personnel when: A. the power supply cable or plug has been damaged.
- objects have fallen into or liquid has been spilled into the enclosure
- C. the unit has been exposed to rain.
- the unit has been dropped or the enclosure damaged.
- E. the unit exhibits a marked change in performance or does not operate normally.
- . Periods of Nonuse If the unit is to be left unused for an extended period of time, such as a month or longer, nove batteries before storage
- Servicing The user should not attempt to service the unit beyond those methods described in the user manual. Service methods not covered in the operating instructions should be referred to qualified service personnel. 14. Magnetic Interference: This product's speakers contain powerful magnets which could cause interference or damage to sensitive equipment such as hard drives, CRT televisions and monitors, as well as medical, scientific, and navigational devices. Keep this unit away from these products at all times.
- 15. Only use attachments/accessories specified by the manufacturer. This product is suitable for use in tropical and/or moderate climates
- 16. The unit should be serviced by qualified service personnel when the enclosure damaged or does not operate
- 17. Attention should be drawn to the environmental aspects of battery disposal.
- 18. No naked flame sources, such as lighted candles, should be placed on this product
- 9. This product is suitable for use in tropical and/or moderate climates.
- 20. WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture

# FCC Information

#### FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could voic er's authority to operate the equipmen NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part
- 15 of the FCC Rules
- 15 of the FCC Rules.
  These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
  However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  Reorient or relocate the receiving antenna.
  Increase the separation between the equipment and receiver.
  Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  Consult the dealer or an experienced radio/TV technician for help.

# CAN ICES-3(B) / NMB-3(B) CAN RSS-216/CNR-216

#### IC Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Developmer Canada's licence-exempt RSS(s). Operation is subject to the following two conditions 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes

(1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance. Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

#### 1 Year Limited Warranty

For warranty and full instructions, visit ihome.com/support

© 2019 SDI Technologies, Inc. All rights reserved Questions? Visit www.ihome.com or call 1-800-288-2792 Toll Free

iBTW39v2-043019-A

21. The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

rrently linked Bluetooth device. If no device will default to current Tone. on to confirm. Press the - or + Buttons as to select one of the four built-in wake-to

