 


iHome™

Model iH25
The Portable System
For Your iPod®

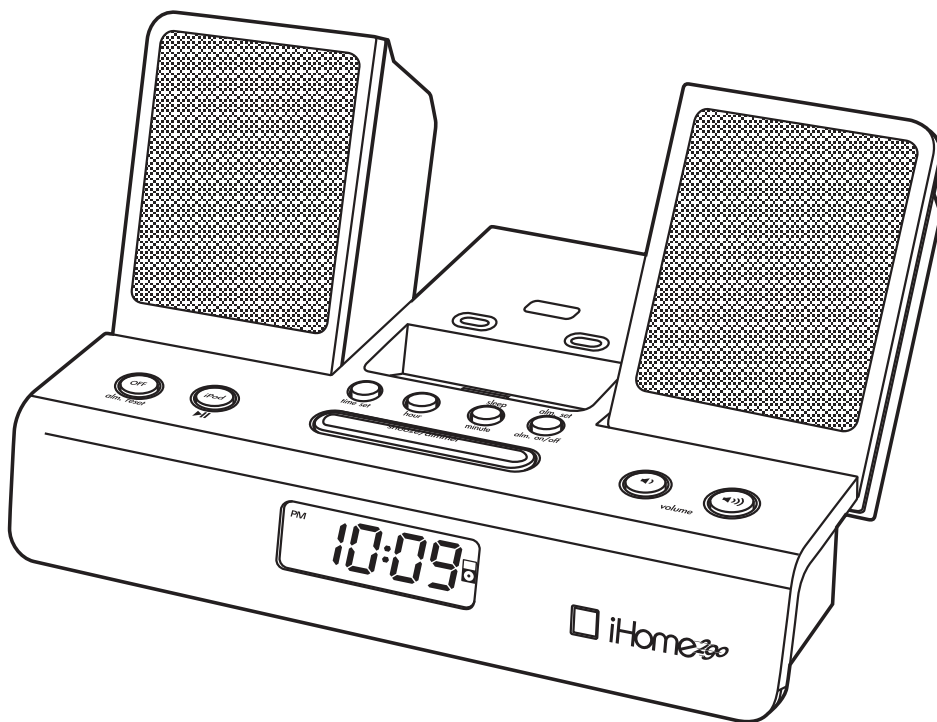

WARNING: The iH25 shuffle port is **ONLY** for use with an iPod shuffle. **DO NOT** connect any other device such as iPod or iPhone to this port as doing so can cause damage to the iH25, iPod/iPhone or both.

Questions? Visit www.ihomeaudio.com

Table of Contents

Quick Start1

Controls and Indicators / iH25 Display2

Using the iH253-4

Replacing iH25 Backup Batteries4

 Install/Replace Backup Battery

 Batteries information

Using The Optional Remote Control Unit5

A Consumer Guide to Product Safety6

Troubleshooting7

Solucionando problemas9

Warranty Information11

A Consumer Guide to Product Safety

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This equipment complies with the limits for a Class B digital device as specified in Part 15 of FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area.

However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference you can try one or more of the following corrective measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the radio or TV.
- Use outlets on different electrical circuits for the equipment and the radio or TV.

Consult your dealer or an experienced radio/television technician if the problem still exists.

 
Modifying or tampering with your system’s internal components can cause a malfunction and might invalidate the system’s warranty and void your FCC authorization to operate it.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can damage the surface of the unit.


quick start

1:power

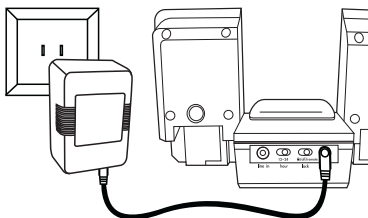


Attach AC adaptor cable to jack on back of the iH25 and plug the other end into a wall socket

 2:batteries

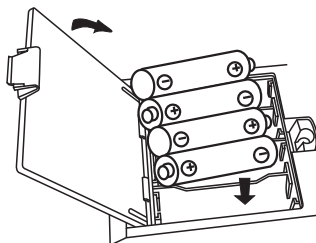

Open battery compartment on the bottom of the unit. Insert 4 "AA" batteries as indicated.

 
3:inserts

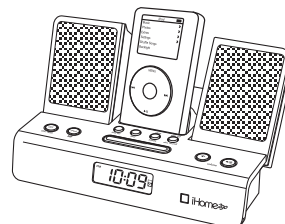

Select the dock insert from the table below for your iPod® model and place insert in dock. Never dock an iPod without an insert in place.


Mini Insert	Thin iPods Insert	Thick iPods Insert	nano Insert	5G iPod (with video)
use with iPod Mini	iPod 3Gen 10-15 GB iPod 3Gen 20 GB iPod 4Gen 20 GB iPod Photo 30 GB	iPod 3Gen 30 GB iPod 3Gen 40 GB iPod 4Gen 40 GB iPod Photo 40 GB iPod Photo 60 GB	iPod nano 1 GB iPod nano 2 GB iPod nano 4 GB	Replace rubber pad per instruction on the 5G rubber pad card

 4:iPod

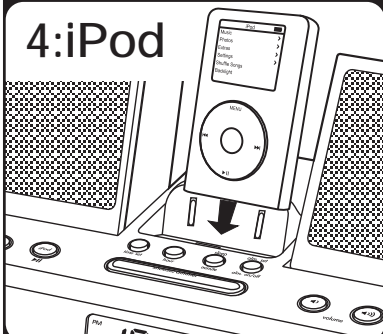



Insert iPod® into dock (iPod must not be in a "skin" or case). Press iPod Button on iH25. iPod will charge while docked.

 5:shuffle

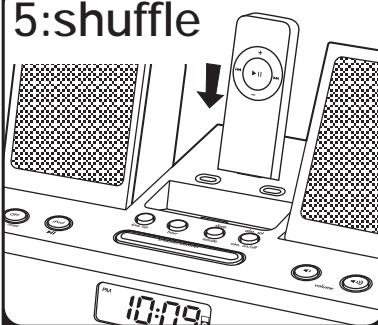


Insert shuffle® into shuffle dock. Press iPod Button on iH25. Turn on shuffle and press play on shuffle. Shuffle will charge while docked.

  Controls and Indicators

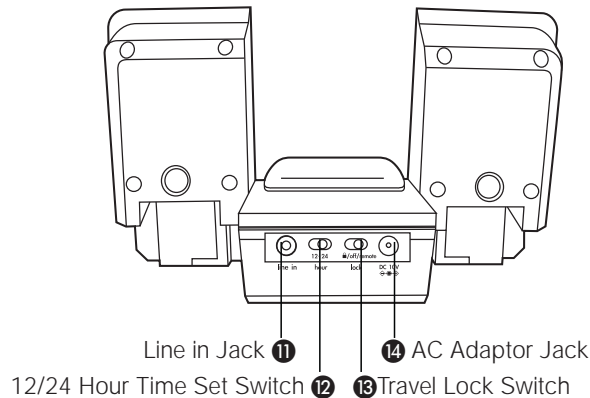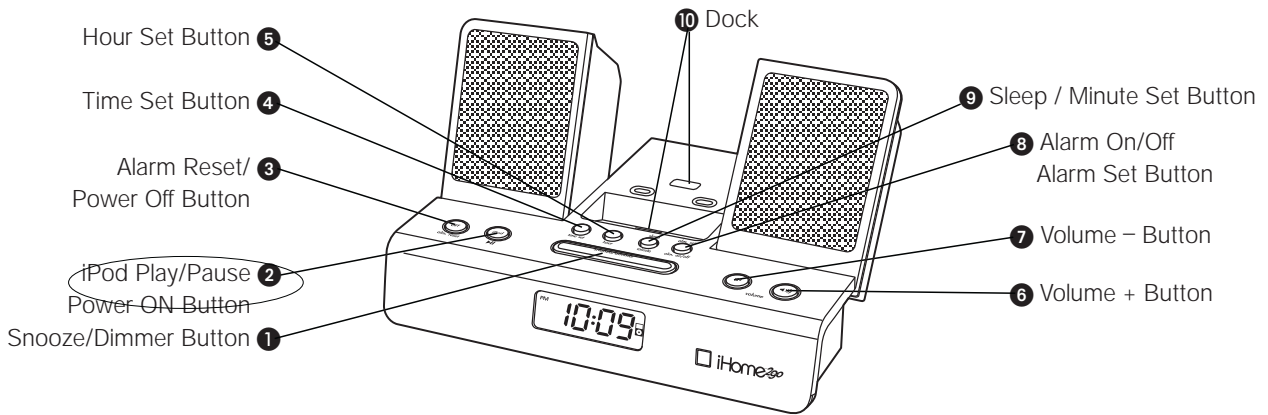

iH25 Display

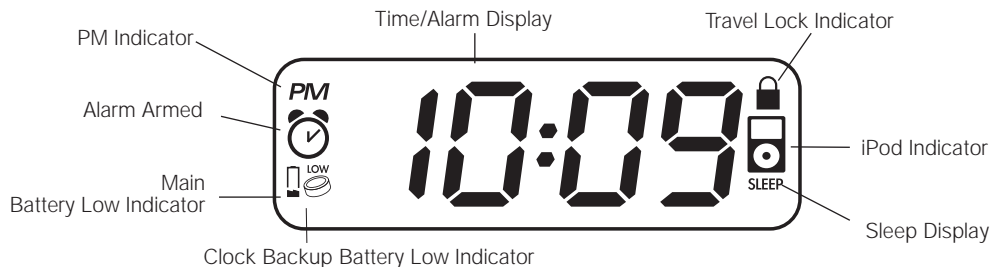 

Connect iH25 to Power Source

- a) Plug the AC adaptor cable into the ⑭ AC Adaptor Jack and the other end into a standard 120v wall socket. Adaptor must be plugged in to charge iPod or shuffle. For portable operation, install 4 "AA" batteries in the compartment on the bottom of the unit.

Setting the Clock

- a) Press and hold the ④ Time Set Button until the display flashes.
- b) Press the ⑤ Hour Set Button to adjust the hour display (a PM indicator appears when time is set to PM; there is no AM indicator)
- c) Press the ⑨ Minute Set Button to adjust the minute display. When the correct time is displayed, press the ④ Time Set button again. Two beeps will indicate clock setting is complete.
- d) To adjust the clock display between 12 and 24 hour settings, slide the ⑫ 12/24 Hour Switch on the back of the unit to 12 hour for standard 12 hour AM/PM display or to 24 hour for 24 hour "military" display.

Using the Alarm

Setting the Alarm

- a) Press and hold the ⑧ Alarm Set Button until the alarm time flashes to wake to iPod (buzzer alarm sounds if no iPod is detected). You cannot wake to iPod shuffle.
- b) Press the ⑤ Hour Set Button to set the desired alarm hour (a PM indicator appears when time is set to PM; there is no AM indicator)
- c) Press the ⑨ Minute Set Button to set the alarm minute time. When the desired alarm time is displayed, press the ⑧ Alarm Set Button again. Two beeps will indicate alarm setting is complete. Alarm is now armed, indicated by the alarm clock icon.

Arming and Disarming Alarm (Turn Alarm Function ON and OFF)

- a) Press the ⑧ Alarm On/Off Button to arm or disarm alarm functions. When armed, the related alarm icon appears in display.

Resetting the Alarm to Come on the Next Day

- a) When the alarm is sounding, press the ③ Alarm Reset/Power Off Button to stop alarm and reset it to come on the following day.

Snooze

- a) Press the ① Snooze/Dimmer Button after the alarm sounds. The alarm will be silenced and come on again 9 minutes later. Snooze can be pressed several times during the 1 hour alarm cycle.

Sure Alarm

The iH25 has a sure alarm feature so the buzzer alarm will still sound in the event of power failure, if backup battery is installed.

iPod and shuffle

Playing and charging your iPod or shuffle

- a) Gently dock iPod in ⑩ Dock, then turn Dock Adjust Dial until iPod is held firmly in place in dock. To use your shuffle, gently dock it in the Shuffle Dock. When docked, iPod and shuffle will charge until fully charged when the iH25 is connected to an outlet with AC adaptor. **Unit will not overcharge iPod or shuffle.**
- b) Press the ② iPod Button to play iPod, and again to pause. For shuffle play, press iPod button and use controls on your shuffle. Do not play iPod and shuffle at the same time.
- c) Press ⑦ ⑧ Volume UP or DOWN buttons to adjust iH25 volume up or down.
- e) Press ③ Alarm Reset/Power Off Button to turn iH25 and iPod off. To turn shuffle off, use shuffle controls.

Using the iH25


Using the Line-in Jack

- a) An audio patch cord comes with the iH25. Use it to play nondocking iPods or other audio devices through the iH25 **① Line-in Jack** (one end in the device's line out or headphones jack, the other in the iH25 line in jack). Make sure there is no iPod docked in the iH25 when using the line-in jack (however, you can charge shuffle while using line-in). Press the iPod Button.

Using Dimmer

- a) Press the **① Snooze/Dimmer Button** during normal operation to adjust brightness of LCD display.

Using the Travel Lock

- a) You can disable the iH25 controls to avoid turning on the device or changing settings while in transit and to save battery life during extended periods of non-use. To do so, move the **③ Travel Lock Switch** (located on the back of the unit) to the Locked icon position. A **Lock Icon**  will appear on the display indicating the unit is locked and controls are inactive. Move the switch to the **Remote** position to restore normal function with remote control capability, or to the **Off** position to restore function with the remote disabled.

Replacing iH25 Backup Battery

 
Install/Replace Backup Battery

The iH25 uses a backup battery system to provide continuous alarm operation and clock settings in the event of a power failure. If the Battery Low Icon located on the left of the display is flashing, it is time to replace the backup batteries. Please make sure the AC adaptor is connected, otherwise all settings may be lost during battery replacement.

Open the battery compartment cover located on the bottom of the unit. Insert 1 “CR2032” battery as indicated. **We recommend the use of alkaline batteries for longer life.**

Batteries information:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon -zinc) or rechargeable (nickel-cadmium) batteries.

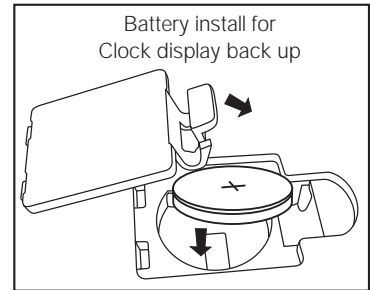


Using The Optional Remote Control Unit

Install/Replace the Remote Control Battery

The remote control battery is already installed at the factory. When the remote control stops operating or its range seems reduced, replace the battery with a new one.

 1. The battery door is located on the back end of the unit.
2. Pull the battery door to release the battery door latch and take out the battery holder.
3. Insert a "CR2032" 3-volt lithium battery. Make sure the polarity (the + and - side of the battery) is correct.
4. Replace the battery holder back in the remote control.

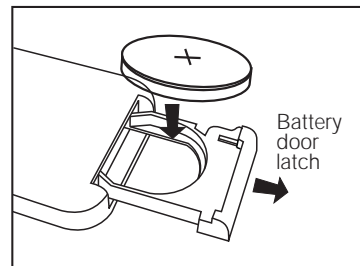


NOTE: PLEASE DISCARD BATTERIES PROPERLY

The Remote Control controls basic functions on the iH25 and certain iPod® functions when the iPod® is docked in the iH25. For best results, aim remote control towards the remote sensor on the lower right corner of the unit.

Operating the remote control

 Move the **13 Travel Lock Switch** to **Remote** position to activate the remote control.

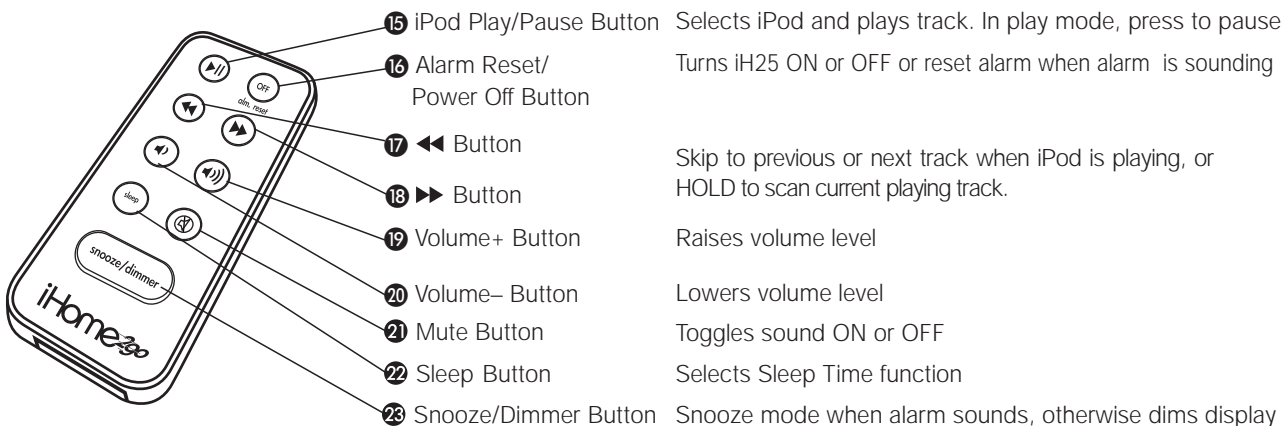

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only as recommended. See the Maintenance section of this manual for cleaning instructions.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
13. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
14. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit www.ihomeaudio.com

Troubleshooting

Symptom	Possible Problem	Solution
Unit doesn't respond (no power)	AC adaptor isn't plugged into a wall outlet or the connector is not plugged into the power supply jack on the back of the unit	Plug the AC adaptor into a wall outlet and plug the connector into the supply jack on the unit
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working
	Batteries are weak and dead	Replace with new batteries
iPod does not dock properly	Using no or wrong iPod insert	Make sure the dock insert is the proper fit for your iPod
	iPod not installed properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
Battery Low icon always flashing	Batteries are weak	Replace with new batteries
	Batteries were not installed properly	Check to make sure the polarity (+ and – ends) matches the diagram in the battery compartment
iPod does not respond to the unit	iPod is not installed properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseal it in the dock.
	Your iPod software is too old	Upgrade software on your iPod. For details visit http://www.apple.com/ipod/download
	iPod is locked up	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details.
	Using 1 st or 2 nd generation iPod, iPod Shuffle or other devices.	iH25 cannot control those iPods or other devices.
Buttons/Controls don't work	Travel Lock is in Lock position	Move Travel Lock to Off or Remote position
iPod does not come on immediately	If your iPod is not used for some time, it may enter deep sleep mode	

Troubleshooting

Symptom	Possible Problem	Solution
iPod didn't charge up	iPod is not installed properly	Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. Then reseat it in the dock.
	iPod is locked up/ frozen	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details. Unit only charges iPods when plugged into wall socket, not while operating on batteries.
	iPod battery has problem	
Sound is distorted	Volume level is set too high	Decrease the volume
	Sound source is distorted	If the iPod original sound source (MP3) is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.
		If you are using an external sound source like older generation of iPod or iPod Shuffle, try reducing the output volume on the device itself.
		Try setting EQ to flat on your iPod/sound source.
	Batteries are weak	Replace current batteries with new ones
Remote Control didn't work	Remote Control is not pointed toward the iH25 remote sensor or sensor is blocked	Point the Remote Control toward the iH25, move within 10 feet of the unit, make sure sensor is unobstructed
	Battery weak	Replace current battery with new battery
	Travel Lock is in Lock or Off position	Move Travel Lock switch to Remote position

Solucionando problemas

Sintoma	Causa	Solución
La unidad no funciona (no circula corriente eléctrica)	El adaptador de AC no está conectado al tomacorriente o el conector no está conectado a la ficha en la parte posterior de la unidad	Conecte el adaptador de AC al tomacorriente y también conecte el conector a la ficha en la parte posterior de la unidad
	El tomacorriente no funciona	Coloque otro aparato en ese mismo tomacorriente para confirmar si el que no funciona es el tomacorriente
	Las baterías están gastadas	Reemplace las baterías
El iPod no encastra correctamente	No ha colocado el encastre del iPod, o está utilizando el encastre incorrecto.	Verifique que el encastre sea el apropiado para su iPod
	El iPod no encastra correctamente	Quite el iPod del encastre y retire la posible obstrucción del encastre o de su iPod. Vuelva a colocar el iPod dentro del encastre.
El icono de batería baja está destellando	Las baterías están gastadas	Reemplace las baterías
	Las baterías no están instaladas correctamente	Verifique que la polaridad de las baterías (- y +) se encuentren de acuerdo al diagrama del compartimiento de baterías.
El iPod no se comunica con la unidad	El iPod no está instalado correctamente	Quite el iPod del encastre y verifique posibles obstrucciones del encastre o de su iPod. Vuelva a colocar el iPod dentro del encastre.
	Su software es obsoleto	Renueve su software. Para mayor información, diríjase a http://www.apple.com/ipod/download
	El iPod no responde	Verifique que su iPod funcione correctamente antes de conectarlo a la unidad. Refiérase al manual de su iPod para más detalles.
	Usted tiene un iPod de primera o segunda generación, un Shuffle u otro tipo de aparato	El iH25 no puede controlar estos otros aparatos
Los botones/controles no funcionan	La Traba de viaje se encuentra en la posición "ON" (trabada).	Corra la traba a la posición "OFF" (destrabada)

Solucionando problemas

Sintoma	Causa	Solución
El iPod no carga	El iPod no está instalado correctamente	Quite el iPod del encastre y retire la posible obstrucción del encastre o de su iPod. Vuelva a colocar el iPod dentro del encastre.
	El iPod está trabado/no responde	Por favor asegúrese de que su iPod funcione correctamente antes de colocarlo en el encastre. Refiérase al manual de su iPod para mayor información.
	La batería del iPod podría tener algún inconveniente	
El sonido sale distorsionado	El volumen se encuentra muy alto	Baje el volumen
	El sonido sale distorsionado de la unidad	Si el sonido original de su iPod era de pobre calidad, las distorsiones y ruidos se harán más notables con los parlantes de alta potencia. Pruebe utilizar otra fuente de audio como un CD.
		Si está utilizando un iPod de primeras generaciones o un Shuffle, intente bajar el volumen de su aparato. También intente apagar el amplificador de bajos
El control remoto no funciona	Las baterías están gastadas	Reemplace las baterías por nuevas
	No está apuntando el control remoto hacia el iH25	Apunte el control remoto hacia el iH25 y manténgase a una distancia máxima de 10 pies de la unidad.

Limited 90-Day Warranty Information

Home Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$30.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$10.00 (\$30.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department
SDI Technologies Inc.
1330 Goodyear Drive
El Paso, TX 79936-6420

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

Questions? Visit www.ihomeaudio.com
For operating instructions: 1-877-ihome01(1-877-446-6301) Toll Free
For any other questions: 1-800-288-2792 Toll Free