## **Limited 90-Day Warranty**

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$15.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered. If service is still required:

- Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
- Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
- Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$10.00 (\$15.00 without proof of purchase).
- Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department SDI Technologies Inc. 1330 Goodyear Drive El Paso. TX 79936-6420

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In one event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

Questions? Visit www.ihomeaudio.com For any other questions: 1-800-288-2792 Toll Free ©2008 SDI Technologies, Inc. All Rights Reserved.



Model iHM4

Stereo speaker case for iPod® / MP3 players




## **IMPORTANT**

Read before proceeding

If you have any questions regarding the operation or use of this product, please visit **www.ihomeaudio.com** to view answers to frequently asked questions.

To learn more about this and other iHome products, please visit us online at www.ihomeaudio.com

QUESTIONS? Visit www.ihomeaudio.com

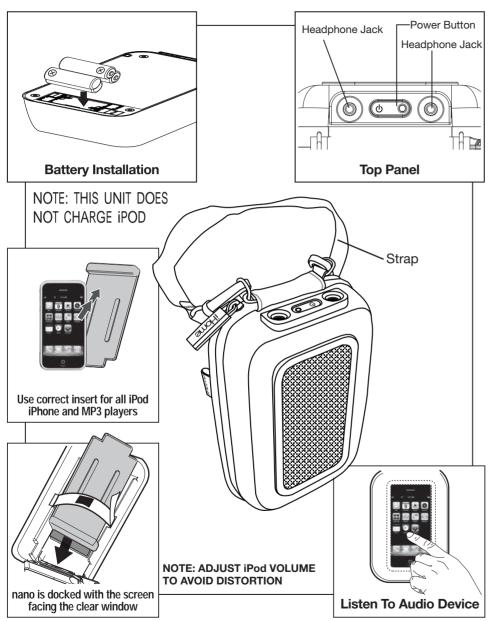

## Using the iHM4

Thank you for purchasing the iHM4. Designed to work with your iPod, iPhone or other MP3 player or audio device, this system provides high quality audio that invites your music to come out and play. Please read the instructions carefully before operating the unit and keep for future reference.

### Installing/Replacing Batteries

- Open the battery compartment door located inside on the bottom of the unit.
- Insert 4 "AAA" (R3) batteries, checking that the + and ends
  of the batteries match the drawing outside the battery
  compartment.
- 3. Close the compartment cover.

#### For Best Performance

- We recommend the use of alkaline batteries for longer life.
  - Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Make sure you dispose of batteries properly (see your local regulations).

# Listening to an iPod, iPhone or other MP3 player/ audio device

 Unzip the iHM4. Plug the end of the built-in audio patchcord into the headphone or Line-out Jack on your device. For nano: Place the included nano insert into the dock. With your nano: expected to the guide plus plus plus the page into

your nano connected to the audio plug, place the nano into the insert with the nano screen facing the clear window. For extra support, place the remaining insert in the dock on top of the nano insert.Pull the elastic retaining strap until the nano is firmly in place against the clear window, then secure using the velcro fastener.

For iPod/other devices: With your iPod connected to the audio plug, place your iPod in the dock facing the clear window. Place the iPod insert into the dock behind the iPod. Secure the insert and iPod in place with the retaining strap.

- 2. Turn on your iPod, iPhone, MP3 player or other audio device, press Play and set desired volume on the device.
- Press the Power Button located on the top of the unit to ON.
   To listen to sound privately, connect headphone(s) to the headphone jacks. Doing so will cut off the speakers.
- Remember to turn unit OFF when not in use to save batteries, and to turn off your iPod, too.

NOTE: Connected iPhones create audio interference noise when a call is received. Turn on Airplane mode to disable phone while playing music.

## **Maintenance**

- Place the unit away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can mar the surface.