 


COLORCHANGING

FM Clock Radio + USB Charging



Controls Overview

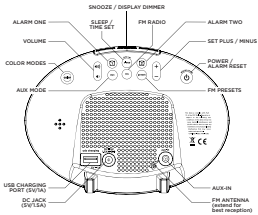

Quick Start Guide

Questions? Visit ihome.com

Quick Set-Up

Step One
Connecting the Unit

Connect the included AC adapter to the DC Jack located on the back of the unit and connect the other end to a working wall outlet.

Step Two
Setting Your Clock

 
- Press and hold the **Time Set Button** until the display flashes.
- Press the **=** or **+** **Buttons** to adjust selections and tap **Time Set** to confirm (make sure you set the correct AM/PM time). The PM indicator is on the left side of the display. There is no AM indicator.
- Do this for time, year, month and date.
- All done!

Step Three
Using Color Modes

Press the **Color Mode Button** repeatedly to cycle through 4 different modes:

- Flash
- Fast
- Stop (Favorite Color)
- OFF


Favorite Color Mode: When the unit is in stand-by, press +/- to cycle through the color spectrum.



To toggle the clock display between 12/24 hour time, press **Alarm 1** or **Alarm 2** while the display is flashing during time setting.



 The Display



Setting the Alarms

This unit features dual alarms which can be set to different times and alarm sources. Each is set in the same way. Instructions are given as "Alarm Button", use **Alarm 1 Button** or **Alarm 2 Button** to set respective alarms. Note: Each step must be completed while display is flashing or setting will time-out with any changes saved.

- Press and hold the **Alarm Button** for 2 seconds until the alarm time display and alarm icon flash. A beep sounds.
- Press the **=** or **+** **Buttons** to adjust the alarm time to the desired time (hold for rapid setting). Press **Time Set** to confirm the alarm time setting. The alarm schedule will flash: 7 (every day), 5 (weekdays) or 2 (weekend only). Press the **=** or **+** **Buttons** to select the desired alarm schedule.
- Press the **Alarm Button** to confirm the alarm schedule. The wake-to source will flash.
- Press the **=** or **+** **Buttons** to select the desired wake-to alarm source: FM Radio or Tone.

Wake to FM Radio: Press the **Alarm Button** to confirm. Press the **=** or **+** **Buttons** to select the desired FM frequency to wake to.

Wake to Tone: Press the **Alarm Button** to confirm.

- Press the **Alarm Button** to confirm wake-to source. The alarm volume will flash.
- Press the **=** or **+** **Buttons** to adjust the alarm volume.
- Press the **Alarm Button** to confirm alarm volume. The current Wake to Light mode will flash.
- Press the **=** or **+** **Buttons** to select the desired Wake to Light mode: (Fast, Stop, Noise). Sun will activate 4 minutes before your sound alarm is scheduled to wake you.
- Press the **Alarm Button** to confirm the alarm settings and end alarm setting mode. 2 beeps will confirm alarm setting is complete. The alarm icon will remain on the display to show the alarm is armed.

Preventing the Alarm and Turning the Alarm On/Off

- Press and release the **Alarm Button** to view the current alarm time, FM station, volume level, and wake-to color mode.
- Press the **Alarm Button** again to toggle the alarm ON or OFF, indicated by the related white alarm indicator.
- When the alarm sounds, press the corresponding **Alarm Button (1 or 2)** or the **Power Button** to disable the alarm and reset it to come on at the same time the next day.

Snooze/Display Dimmer

Snooze: When the alarm is sounding, press the **Snooze/Dimmer Button** to snooze for 9 minutes.

Dimmer: Press the **Snooze/Dimmer Button** (when alarm is NOT sounding) to adjust display brightness (High, 3, 2, Low, OFF).

Programmable Snooze

To adjust the snooze duration:

- Press and hold the **Snooze/Dimmer Button** until the display starts to flash.
- Use the **=** or **+** **Buttons** to adjust the snooze duration from 1-29 minutes.
- Press the **Snooze/Dimmer Button** again to confirm.

Sleep Mode

To set a sleep timer:

- Press the **Sleep/Time Set Button**.
- Press the **Sleep/Time Set Button** repeatedly to toggle through sleep timer settings (20, 30, 40, 50, 15 and off).

Model: IM30

ONE YEAR LIMITED WARRANTY

Home Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please contact Customer Service at Homeaudio.com/support@contact to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage. If proof of purchase cannot be produced, the product will be deemed out-of-warranty. The date of purchase, vendor, product model number, and purchase price must be legible and verifiable.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (1) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (2) cracked or broken cabinets, or units damaged by excessive heat; (3) damage to digital media players, CDs or tape cassettes (if applicable); (4) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so those restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2020 SDI Technologies, Inc. All rights reserved.
Distributed by: www.ihome.com

FM Radio + Presets

- Press and release the **FM Radio Button** to select FM radio mode.
- When FM mode is selected, press the **=** or **+** **Button** to tune the radio to a desired station. Press and hold the **=** or **+** **Button** for a few seconds to scan for the next clear station.
- Remember a station as a preset:

 - Press the **Presets Button** as needed to step through the 4 presets (P1 - P4) to the number you wish to assign, and then hold the **Presets Button** until the selected preset number begins flashing in the display and 1 beep sounds.
 - Press the **=** or **+** **Button** to tune the radio to a desired station. Hold briefly to have the radio auto scan/search for the next clear station.
 - Press the **Presets Button** to confirm the setting, two confirmation beeps will confirm the setting and the preset number you wish to assign. Repeat steps A-C to preset up to 4 stations.
 - To listen to a preset station, press the **Presets Button** repeatedly to choose a preset (P1-P4).

AUX Mode

Connect your audio device to play music through the speaker on the IM30. To do so:

 
- Correct one end of a 3.5mm audio cable (not included) to the **AUX-IN** jack on the unit.
- Connect the other end to the headphone jack on your audio device.
- Press the **AUX Mode Button** on the unit, and press play on your device to play music.
- Use the controls on your device to navigate tracks.

Charging Devices Via USB Port

- Connect the standard USB end of a USB cable (not included) to the USB port on the back of the unit and connect the other end to the charging port on your device.
- Monitor the charging on your device. Some devices use a proprietary charging method and will not charge using the USB port. If this happens, you must charge your device using the charger that came with it.

NOTE:

- Unit must be plugged into working outlet to charge devices.
- Some devices may cause charging noise while play, use aux-in jack and charge via USB simultaneously



Battery Back-Up

The unit uses 2 AAA back-up batteries (not included) to provide continuous alarm operation and clock settings in the event of a temporary power failure. When the battery icon on the display is flashing, it is time to replace the back-up battery. The battery compartment is located on the bottom of the unit.

- Make sure the AC adapter is connected, or you will lose your radio and alarm settings during battery replacement.
- Use a Phillips screwdriver to open the battery compartment door.
- Insert 2 AAAA batteries, checking that the polarities match the markings on the unit. Replace the compartment door. Do not over-tighten.



Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Remove the plastic protective film from the back of the display.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents such as thinner or similar materials can damage the surface of the unit.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. Please read all warnings, read and follow all instructions and keep these instructions handy for future reference.

- Do not use this product near water, and clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Only use accessories/accessories specified by the manufacturer.
- Unplug this product during lightning storms or when unused for long periods of time.
- Damage Requiring Service - This product should be serviced by qualified service personnel when:
 - Plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain. The unit has been dropped or the enclosure damaged.
 - The unit exhibits a marked change in performance or does not operate normally.
- No naked flame sources, such as lighted candles, should be placed on this product.
- Attention should be drawn to the environmental aspects of battery disposal.
- This product is suitable for use in tropical and/or moderate climates.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not disassemble the battery in the household trash or fire.
- The mains plug of power adapter is used as the disconnect device. It shall remain readily operable.

FCC INFORMATION

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

- The device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not properly installed and used in accordance with the instructions, may cause harmful interference to radio communications.

We warrant that this equipment will not cause harmful interference to radio communications. However, there is no guarantee that interference will not actually occur. If your equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CAN ICES 3(B) / NMB-3(B)

CANADA STATEMENT

This device complies (except exempt transmitter(s)/receiver(s)) that comply with Innovation, Science and Economic Development Canada's license-exempt (SED) Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The equipment complies with ICES radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

L'ensemble/l'équipement exempt de licence conforme aux présent approuvé en vertu de la Loi sur l'innovation, la science et le développement économique Canada applicable aux appareils radio exempts de licence. L'exploitation est soumise aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage;
 - (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- Le matériel est conforme aux limites d'exposition aux rayonnements électromagnétiques d'un environnement non contrôlé.
- Le matériel doit être installé à une distance minimale de 20 cm entre le radiateur et votre corps.
- Tout changement ou modification non expressément approuvé par la partie responsable de la conformité pourrait annuler le droit de l'utilisateur à utiliser l'équipement.