

360° UV-C Sanitizer

with Wireless Charging

Model: iUVW3

Quick Start Guide

QUESTIONS? visit www.ihome.com



EDONT DANEI

BACK PANEL

(0)

DISPLAY

PROGRAMMABLE SNOOZE

Prace and hold the 777/Dimmer Button

CHARGING DEVICES VIA USB

2. Use the + or - Buttons to adjust the snooze duration from 1-29 minutes. Press the ZZZ/Dimmer

charge your device, connect a standard USB cable

(not included) to the USB port on the unit, and plug

the other end into the charging port on your device.

installed to provide continuous alarm operation and

failure. Remove the battery pull tab before use. When

the battery icon on the clock display is flashing, it is

clock settings in the event of a temporary power

To adjust the snooze d

Button again to confirm

in order to charge devices.

Make sure the AC adapter is

battery replacement.

time and alarm settings during

Use a Phillips screwdriver to open

the battery compartment door.

3. Remove exhausted battery from

compartment and insert new 1

side is facing you. Replace compart-ment door. Do not overtighten.

Battery Back-Up

Status Indicator

- Wireless Charging Area

This superior quality LIV-C LED light safely kills up to 99.9% of surface germs in under 3 minutes, without using

harmful chemicals. The iUVW3 is safe to use on everyday essentials including evenlasses smartphones cosmetic tools toothbrushes and more USING THE UV BRACKETS

Brackets are provided to ensure optimal spacing between

vour objects and the UVC LEDs. Swing brackets to a perpendicular position to provide adequate space



SANITIZING ITEMS

the lid

· Make sure the iUVW3 is plugged into a working wall switch. Lift the lid of the unit and place items inside, making

sure not to overlap items. Close Press and release the Sanitize Button ♦ to begin a UV sanitizing cycle. A countriown indicator willappear on the display, and a beep will sound

To extend to the current cleaning cycle, press and release the Sanitize Button again. Each press adds 180 seconds to the cycle, with a maximum cleaning time of 900 seconds. When the cleaning cycle is over, 'End' will appear on the clock display for 2 seconds, and then the

USING THE SANITIZER

If the lid is opened during the UV sanitizing cycle, the

NOTES

timer will pause. Closing the lid within 1 minute will 3. We recommend leaving the brackets in place while sanitizing your items. If items are too large, the brackets

Features a built-in safety switch that will shut off the UV light whenever the lid is opened. Do not attempt to

defeat the safety function and operate the unit with an

- may be removed in those cases we recommend flinning the items over and sanitizing a second time for optimal effect To cancel a sanitizing cycle, press and hold the Sanitize
- Button for 2 seconds. The clock time will appear on the WIRELESS CHARGING

Supports: Qi compatible phones (also works with plastic

Place Qi compatible device facing up on the charging rest

located on the top of the unit. Charging status will be indicated by the lightning icon 4 on the display:

Rapid blinking icon: Device is not charging (reposition device Slow blinking icon: Device is charging Solid icon: Device is fully charged

Note: Qi status I FD may continue to blink slowly

(indicating charging) for iOS devices that are fully charged

CALITION: Not all cases are Qi compatible. Remove phone's metal protective case before charging. Do not place

magnetic or metal objects on charger during charging. * Some larger size phone cases may not be able to charge



Step One: Connecting the Unit nect the included AC adapter to the DC jack on the back of the unit and connect the other end to a working wall outlet not controlled by a light switch

9

Step Two: Setting Your Clock Remove battery pull tab from the bottom of the unit

Press and hold the Time Set Button (on the back of

CLOCK SETUP

lashes and a beep sounds. Release the **Time Set** 2. Press the - or + Buttons to adjust the clock to the current time (hold for rapid setting). Make sure you set the correct AM/DM time. The DM indicator

annears to the left of the display (There is no AM 3. Press and release the Time Set Button to confirm the current time setting. The YEAR will flash on the display Press the - or + Buttons to set the year

4 Press and release the Time Set Button to confirm the current year setting. The month will flash on the display. Press the - or + Buttons to set the month. Press and release the Time Set Button to confirm the current month setting. The day will flash on the display. Press the - or + Buttons to set the day.

6. Press and release the Time Set Button to confirm settings. 2 beeps will sound to indicate time setting mode is complete

Daylight Savings Time: By default, the DST Switch is set to Auto and will automatically adjust the time in

Tip: Press the Alarm Button during clock setting

to toggle between 12/24 hour display modes.

ECC Information

SETTING THE ALARM

 Press and hold the Alarm Button for 2 seconds until the display flashes. A beep sounds. Release the Alarm Button 2. Press the - or + Buttons to adjust the alarm time to

the desired time (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The PM indicator appears to the left of the display. (There is no AM indicator) 3. Press the Alarm Button to confirm the alarm time

setting. The alarm schedule will flash: 7 (every day), 5 (weekdays) or 2 (weekend only). Press the - or + Buttons to select an alarm schedule

 Press the Alarm Button to confirm the alarm settings and exit alarm setting mode. 2 beeps will confirm alarm setting is complete. The alarm icon will remain on the display, to show the alarm is armed.

To Preview: Press and release the Alarm Button to view the current alarm time

Turning Alarm ON/OFF: Press and release the Alarm Button twice within 5 seconds to toggle the alarm ON and OFF, indicated by the related white alarm

When the slarm enunds proce the Alarm Button to

time the next day

SNOOZE / DISPLAY DIMMER

Snooze: When the alarm is sounding, press the ZZZ/Dimmer Button to snooze for 9 minutes.

Dimmer: Press the ZZZ/Dimmer Button (when alarm is NOT sounding) to adjust display brightness (Display can be dimmed during Snooze mode.)

RESET

If you are experiencing abnormal operation, try to reset the unit. To do so:

Disconnect the AC adapter and remove the backup battery from the compartment on bottom of the unit. Wait 2 minutes, then re-install the battery and re-connect the AC adapter

(4)

* H

BACKUP

 $\triangle \oplus$

WARNING This product contains a button/coin cell battery. Do not ingest the

If the battery compartment does not close securely, stop using the product and keep it away from children.

CAUTION - RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES

Maintenance + Caring For Your Device

and/or in the unit while cleaning, as they may damage the product.

WARNING - DO NOT ATTEMPT TO OPERATE THIS DEVICE WITH THE LID/TOP OPEN. The divice was designed to shut off automatically when it the ind/top is open. It is important NOT to defeat or tamper with this safety feature as UVC light can cause damage to eyesight and sim.

WARNING - Use this device only for its intended use as described in this ma if the device is not used in the marrier specified, the protection provided be equipment may be correctmised. Always place device on a flat smooth su

IMPORTANT SAFFTY INSTRUCTIONS Please heed all warnings, read and follow all instructions and keep these

All users should be alerted to the potential hazards indicated by the product safety

WARNING - KEEP OUT OF REACH OF CHILDREN. This device is not a toy and is not

WADNING - To work up the risk of fire or electric shock, do not expose this product to ATTENTION: Use only the supplied power adapter. This product must only be supplied at safety extra low voltage corresponding to the marking on the The mains plug of power adaptor is used as the disconnect device, it shall remain ATTENTION: Prolonged or excessive exposure to UV-C light may degrade and discrete fallering relative and other non-metallic materials.

rual. not operate if any damage to the unit is visible or suspected, such as after

being dropped.

Do not use if changing cable/cord is damaged.

Keep the cable/cords and device away from heated surfaces.

Close supervision is necessary when any appliance device is used by or near
children and people with special needs.

Do not operating in the presence of exclosives and/or filammable furnes, smoke

or injunies.
Do not use this product near water.
Lingbug unit and clean only with damp cloth. Stronger cleaning agents, such as
Bencience, thirner or similar materials can damage the surface of the unit.
Heat - This product should be situated away from heat sources such as
realizabors, heat registers, stowes or other applications (including amplifiers) that

Damage Requiring Service - This product should be serviced by qualified

the unit has been dropped or the enclosure damaged.

The unit has been dropped or the enclosure damaged.

The unit exhibits a marked change in performance or does not operate.

Plug has been damaged, objects have faller into or liquid has been spilled into the enclosure the unit has been expended into the enclosure.

No naked flame sources, such as lighted candles, should be placed on this

product.
Attention should be drawn to the environmental aspects of battery disposal.
This product is suitable for use in tropical and/or moderate climates."

Disclaimer: This product is not intended to diagnose, treat, cure or prevent any disease or medical condition. The information provided herein is not to be construed as a medical diagnosis or medical advice. No medical claims are implied or intended with the sale of this device. Purchaser accepts responsibility for correct and proper use of divice.

For warranty and full instructions, visit ihome.com/support

© 2021 SDI Technologies, Inc. All rights reserved. Questions? Visit www.ihome.com

(2) This down may not cause hermful retrievers, and (2) this down must asset part interference records of the production retrievers the major cause underward greaters.

The production of the p

ISED information

Printed in China

the adaptimes include a trialled at an optimized some state in minimal classification (a) of the between the relation and optimized principle and the party responsible for compliance could void the user's authority to operate the equipment. Cut department est conform as at limites dissposition aux radiations (IC CNR-102 disables pour un environment on conformation).

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est succeptible d'en compromettre le fonctionnement. susceptible d'en compromettre le fonctionnement. L'appareil est conforme aux exigences d'exposition RF ISED, les utilisateurs peuvent

de la conformité peut annuler l'autorité de l'utilisateur à utiliser l'équipement. CAN ICES-3 (B) / NMB-3/B). CAN RSS-216 / CNR-216