


TIMEX

Model: T121v23

Digital Alarm Clock with Battery Backup



SET +/-

- Press to decrease/increase settings

TIME SET

- Press and hold Time Set button to set Clock
- Use +/- to set hour and press Time Set button to confirm
- Use +/- to set minute and press Time Set button to confirm
- Note: Use Alarm Button to select 12/24 hour display while in time set mode


ALARMS

- Press & Hold Alarm button to Set Alarm
- Use +/- to select hour and press Alarm button to confirm
- Use +/- to select minute and press Alarm button to confirm
- Press and release Alarm button to arm/disarm alarm
- When alarm is sounding, press Alarm button to disarm and reset for next day
- NOTE: Adjust the loudness of the alarm with the Alarm Volume switch on the right side panel

SNOOZE/DIMMER

- Press to Snooze Alarm
- Press to Adjust Display Brightness: cycle through Hi, Lo and OFF


REAR PANEL

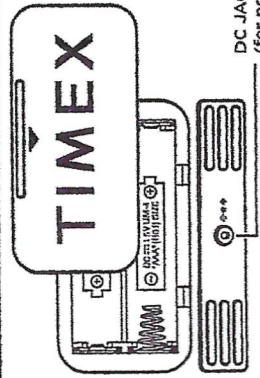

Installing the Batteries

- Press in and pull the battery door to open and remove the battery door.
- Install 2 new "AAA" batteries, matching the (+/-) markings in the battery compartment.
- Replace the door.

SIDE PANEL

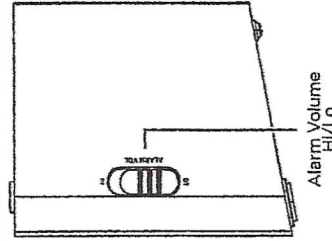

DISPLAY ICONS

*Remove protective film in the front of display by peeling it off.

