




Model: iB5

Noise Isolation Earbuds with Interchangeable Ear Cushions

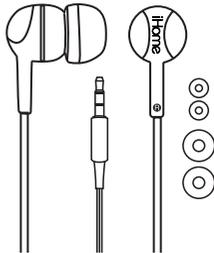

Cord Management

The hang tag at this top of the package also functions as a convenient cord management device. Pass the headphone plug through the opening in the hang tag as shown and then wind the headphone cord around the hang tag. This will keep your headphone cord tangle free and always ready to use.



Using Your iHome Headphones

The earpieces are marked "L" and "R". Place the "L" earpiece in your left ear and the "R" earpiece in your right ear for proper fit and best sound. If the earpieces are inserted incorrectly they will not fit properly in your ears and the sound quality will not be satisfactory.

Connect the headphone plug to the headphone jack of your music player. Be sure that the plug is fully inserted into the jack. If the plug is not fully inserted you may only hear sound from one earpiece.

To protect your hearing, always start listening with the volume control on your music player set to a low level and gradually increase the volume to a comfortable listening level.

NOTE: Your headphones are supplied with three different size silicon tips (S-M-L) for maximum comfort and to seal out unwanted noise. The "M" (medium) size tips were installed at our factory. If you find that the installed tips are too small or too large for your ears, you may remove them and replace them with the larger or smaller size accessory tips. To replace the tips simply pull them off the earpieces. To install different size tips, push them on to the earpieces and make sure they are fully seated on each earpiece so that they do not come off when you remove the earpiece from your ear. If one of the tips remains in your ear when you remove the headphones, remove the tip carefully and avoid pushing it further into your ear canal. Seek medical assistance if one of the tips becomes lodged in your ear and you are unable to remove it.

IMPORTANT! Listening at high volume for long periods of time can result in long-term hearing damage. For your safety, do not use headphones if they would prevent you from hearing warning sounds, such as while driving a car or motorcycle, riding a bike, etc.

NOTE: In extremely cold or dry air conditions you may notice a slight "tingling" feeling in your ears when using in-ear headphones. This is the result of the build-up of static electricity in your body. This is normal and not an indication of any problem with your headphones.

Limited Lifetime Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for the lifetime of the product from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by SDI Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Call SDI Customer Service at 1-800-288-2792 for Return Authorization and for the address of the Factory Service Center.
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box. SDI is not responsible for damage that occurs during shipping to the Factory Service Center.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.
4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by SDI Customer Service.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2013 SDI Technologies, Inc. All rights reserved

**Questions? Visit www.ihomeaudio.com or
call 1-800-288-2792 Toll Free.**

iB5-030413-English

Printed in China



Modèle: iB5

Boutons d'oreilles Insonorisés Avec Coussins d'oreilles Interchangeables

Gestion des cordons

L'étiquette en haut de l'emballage devient également un enrouleur de cordon utile. Passez la fiche du casque dans l'ouverture de cette étiquette comme illustré puis enroulez le cordon des écouteurs autour de l'étiquette. Cela permet de garder votre cordon des écouteurs sans enchevêtrement et toujours prêt à l'emploi.



Utilisation du casque iHome

Les oreillettes sont marquées « L » (gauche) et « R » (droite). Placez l'oreillette « L » dans votre oreille gauche et l'oreillette « R » dans votre oreille droite pour obtenir le meilleur. Si les oreillettes sont incorrectement insérées elles ne feront pas adéquatement dans vos oreilles et la qualité du son ne sera pas satisfaisante.

Branchez la fiche des écouteurs à la prise d'écouteur sur votre lecteur de musique. Veillez à ce que la fiche soit entièrement insérée dans la prise. Si la fiche n'est pas complètement insérée vous n'entendrez le son que d'une seule oreillette.

Afin de protéger votre ouïe, commencez toujours par écouter en réglant le volume de votre appareil à un niveau faible, et augmentez ensuite graduellement le volume pour parvenir à un niveau d'écoute confortable.

REMARQUE : Vos écouteurs sont fournis avec des embouts en silicone de trois grandeurs différentes (S-M-L) pour un confort maximal et pour bloquer les bruits indésirables. Les embouts de grandeur « M » (medium) sont installés à notre manufacture. Si vous trouvez que les embouts installés sont trop petits ou trop grands pour vos oreilles, vous pouvez les retirer et les remplacer avec les embouts plus grands ou plus petits. Pour remplacer les embouts tirez-les simplement des oreillettes.

IMPORTANT ! L'écoute à volume élevé pendant de longues périodes peut entraîner des dommages auditifs irréversibles. Pour votre sécurité, n'utilisez pas un casque s'il vous empêche d'entendre les avertisseurs sonores de la circulation, par exemple au volant d'une voiture ou d'une moto, à vélo etc.

REMARQUE : Dans des froids extrêmes ou des conditions arides vous pourriez remarquer un petit chatouillement dans vos oreilles lorsque vous utilisez des boutons d'oreilles. Ceci est le résultat d'un amas d'électricité statique dans votre corps. Ceci est normal et n'est aucunement une indication d'un problème avec vos écouteurs.

Informations relatives à la garantie limitée à vie

iHome Products, une division de SDI Technologies Inc. (ci-après désignée sous le nom SDI), garantit que cet appareil est exempt de tout défaut de fabrication et de matériaux, dans des conditions normales d'utilisation, pour une période d'un an à compter de la date d'achat initial.

Si cet appareil ne fonctionne pas de manière satisfaisante, il est préférable de le retourner au magasin où il a été acheté. Si le problème n'est pas résolu à ce niveau et si l'appareil doit toujours être réparé pour une défaillance ou un dysfonctionnement durant la période de garantie, SDI, à sa discrétion, le réparera ou le remplacera gratuitement. Cette décision est prise suite à une vérification de la défaillance ou du dysfonctionnement de l'appareil retourné au Centre des services agréé par le Service à la clientèle SDI. L'appareil doit être accompagné d'une preuve d'achat et d'une date d'achat. Tout appareil reçu sans preuve d'achat sera facturé pour toute réparation selon un barème hors garantie.

Avant de renvoyer cet appareil pour réparation, mettez des piles neuves (si possible), car des piles déchargées ou défectueuses sont la cause de la plupart des problèmes.

Si malgré cela le problème n'est pas résolu :

1. Appelez le service à la clientèle SDI au 1-800-288-2792 pour obtenir un numéro d'autorisation de retour et l'adresse du Centre des services.
2. Enlevez les piles (s'il y a lieu) et emballez le produit dans une boîte en carton ondulé robuste et bien rembourrée. SDI ne peut pas être tenue responsable des dommages qui risquent de se produire pendant le transport vers le Centre des services.
3. Si l'appareil est toujours sous garantie, joignez une copie de votre ticket de caisse, relevé de carte de crédit ou toute autre preuve de la date d'achat. Indiquez également votre nom, adresse, une brève description de la cause du retour de l'appareil et le numéro d'autorisation de retour. Aucun appareil ne peut être réparé sans un numéro d'autorisation de retour.
4. Inscrivez le numéro d'autorisation de retour sur l'un des côtés de l'emballage que vous envoyez, port payé et assuré, à l'adresse du Centre des services agréé par le Service à la clientèle SDI.

Exclusion de Garantie

REMARQUE : Cette garantie n'est valable que si l'appareil a été utilisé aux fins pour lesquelles il a été destiné. Elle ne couvre pas (i) tout appareil qui a été endommagé par négligence, actes délibérés, mauvaise utilisation, accident, qui a été altéré ou réparé par des personnes non autorisées ; (ii) tout appareil dont le boîtier est fissuré/brisé ou qui a été endommagé par une chaleur excessive ; (iii) tout appareil dont le lecteur CD/cassettes est endommagé (s'il existe) ; (iv) les frais d'expédition de l'appareil au centre des services et de retour à son propriétaire.

Cette garantie n'est valable qu'aux Etats-Unis d'Amérique et ne s'applique qu'au propriétaire initial de l'appareil. En aucun cas, SDI, une de ses filiales, sous-traitants, revendeurs, dirigeants, administrateurs, actionnaires, membres ou agents ne seront tenus responsables envers vous ou un tiers de tout dommage direct ou indirect, toute perte de profits, d'indemnisation au-delà du dommage subi. (Certains Etats n'autorisent pas de limitations de garanties implicites ou d'exclusion de dommages consécutifs, il se peut donc que ces restrictions ne s'appliquent pas à vous). Cette garantie vous accorde des droits légaux spécifiques auxquels peuvent s'ajouter d'autres droits pouvant être différents d'une juridiction à l'autre.

Votre reconnaissance et votre accord à respecter toutes les limites de responsabilité de la garantie ci-haut mentionnée est un contrat irrévocable pour vous suite à votre transfert de devises (mandat-carte, chèque de banque ou carte de crédit) pour l'achat d'un produit SDI.

**©2013 SDI Technologies, Inc. Tous droits réservés.
Des questions ? Rendez-vous sur www.ihomeaudio.com
ou composez le numéro vert 1-800-288-2792**