iHome. Bluetooth®

Model: iB88
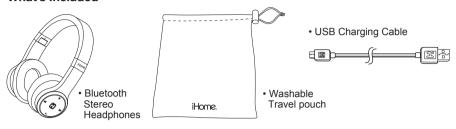
Dust Proof, Water-resistant On-Ear
Rechargeable Bluetooth Stereo Headphone

BC

Introduction

Your new iHome Bluetooth stereo headphone is designed to link with your Bluetooth enabled smartphone or music player to allow you to wirelessly listen to music and answer phone calls within the normal 10 meter (approximately 33 feet) Bluetooth operating range. In addition this model is classified as "IP65 Ratting" meaning that it is dustproof and highly water-resistant so that it can be safely used in all kinds of adverse weather conditions without damage. But please note that it is not submersible. The breathable ear pads are removable and hand-washable.
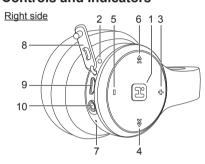
What's Included

• Bluetooth Stereo Headphones
• Washable Travel pouch
• USB Charging Cable

Specifications

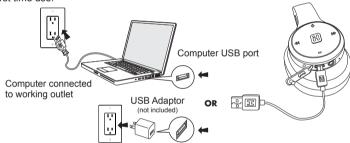| Bluetooth specification:	Supports V4.0+ EDR with Handsfree Profile 1.6, Headset Profile 1.1 and A2DP profile 1.2 (Class II) and Audio/Video Remote Control Profile AVRCP
Battery:	360mAh
Standby time (unpaired):	up to 90 days (with fully charged battery)
Talk time:	up to 18 hours (with fully charged battery)
Music Playing time:	up to 18 hours (with fully charged battery)
Operating Distance:	up to 10 meters / approximately 33 feet
Certifications:	CE, FCC, RoHS, BQB

PREPARATION FOR USE

1. Controls and Indicators

Right side

1. Multi-function button: Power On/Off, Answer/End, Pair and Play/Pause.
2. Power/Pairing/Charging LED Indicator
3. Volume Up (+) Button
4. Skip Track Forward Button (>>)
5. Volume Down Button (-)
6. Skip Track Reverse Button (<<)
7. Microphone
8. Water Resistant Cover
9. Micro USB Charging Port
10. Auxiliary Input Jack

2. Charging Your Headphones

IMPORTANT: Your headphones operate on a built-in rechargeable lithium-ion battery. Although the battery was fully charged when it left our factory, like all rechargeable batteries it can begin to discharge during periods of non-use. We recommend that you charge the battery for at least 2.5 hours before first time use.

Computer connected to working outlet
Computer USB port
USB Adaptor (not included)
OR

1. Connect the micro USB plug on the charging cable to the micro USB port on the headphone.
2. Connect the standard USB plug on the charging cable to any standard USB power port such as found on a notebook computer, or the charging adapter for an iPod, iPhone, etc.

The Power/Charging/Pairing indicator will glow RED while the headphone is charging. The indicator will turn off when the battery is fully charged.

Reminder: Allow the battery to charge fully before first time use. Normal recharge time should take about 2.5 hours. When fully charged the battery provides up to 14 hours of working time, or 90 days of standby time.

Because your iB88 headphones use Bluetooth version 4.0 the battery level indicator of the headphones may also appear on your iPhone home screen, usually adjacent to the phone's own battery level indicator, if your specific phone supports this display function.

NOTE: While the headphone is being charged the Power is automatically switched 'Off'. You cannot listen to the headphones while charging.

3. Multi-Function Button (MFB)

Pressing the MFB button turns the headphones "On", initiates pairing, answers/ends phone calls, controls Play/Pause function and turns the headphones "Off".

4. Switching the Power On and Off

1. Press and hold the Multi-function button for approximately 3 seconds. The voice prompt will say "Power On" and the LED indicator turns BLUE and flashes two times per second. (The first time headphones are powered on they enter auto-pairing mode, indicated by flashing red and blue LEDs. Follow steps 3 & 4 under Manual Pairing below to complete pairing.)
2. When the power is "On" press and hold the Multi-function button for approximately 3 seconds. The voice prompt will say "Power Off". The LED indiator turns to red and then shuts off. This indicates that the power is "Off".

5. Manual Pairing With a Bluetooth Device For The First Time

If your smartphone or music player, such as the iPod touch, is Bluetooth enabled (supports the A2DP Bluetooth Profile) you may pair these iHome headphones with your phone, music player, tablet or computer to listen to music and make or receive calls as long as the two devices are within the Bluetooth operating range of approximately 33-feet of each other.

Note: Your iHome headphones must be in the Power "Off" mode to begin the manual pairing process.

1. Make sure that your iHome iB88 headphones are switched "Off". Make sure that your smartphone or music player is "On".
2. Press and hold the Multi-function button on your iB88 headphones for about 6 seconds until you hear the "Power On" and "Pairing" voice prompts. The LED indicator begins alternately flashing blue and red to indicate it is trying to pair with a compatible device.
3. If necessary, turn on the Bluetooth function of your phone or music player so that it begins searching for a compatible device.
4. "iHome iB88" should appear on your phone or music player's compatible devices list. You may also see a message such as "Not Paired". Tap on that message to complete the pairing process. If your phone or music player asks for a "password" to complete the pairing process, enter '0000' on the keypad of your phone or music player.
5. When pairing is successful the screen on your phone should show "iHome iB88 Connected" or similar message and you will hear the voice prompt say "Your device is connected". The LED indicator on the iB88 headphones will begin flashing blue two times per second. Your headphones are now ready for use.

NOTE: If your iB88 headphones are not able to find a Bluetooth device that is in range and "discoverable" after 3 minutes, the headphones will automatically power "Off" to preserve the battery.

6. Auto-Linking With A Previously Paired Device

If your iB88 headphones were previously paired with a Bluetooth enabled smartphone or music player they will attempt to auto-link with that device again whenever that device is within the Bluetooth operating range.

Press and hold the Multi-function button on your iB88 headphones for about 3 seconds until you hear the "Power On" voice prompt. If a previously paired device is found to be within range and turned 'On' the iB88 will re-link with it automatically. You will hear the voice prompt say "Your device is connected."

Note: If no previously paired device is found after 3 minutes the auto-linking function stops and your iB88 headphones shut off automatically to preserve the battery life.
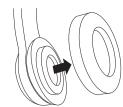
7. Wearing Your Headphones

Your iHome iB88 Bluetooth headphone is supplied with padded ear cushions for long wearing comfort. The padded ear cushions can be removed from the headphone and can be hand washed in mild soap and water to keep them fresh and clean.
NOTE: Do not use harsh chemicals, cleansers or detergents and do not machine wash.

To remove and replace the padded ear cushions refer to the illustration.

The headband can be extended to accommodate almost any head size. There are 'L' and 'R' markings on the inside of the headband. When the headphone is worn properly the controls will be on your right side.

8. Using Your Headphones

Note: Some of the functions described below may not be supported on your specific smartphone. Check with your smartphone owner's manual to confirm the features supported by your phone.

Function	Action Required
Turn headphones "On"	When headphones are "Off" press and hold the MFB inward for 3 seconds until you hear the "Power On" voice prompt.
Enter the Pairing Mode	When headphones are "Off" press and hold the MFB inward for 6 seconds until you hear the "Pairing" voice prompt. The LED indicator flashes blue and red rapidly.
Pairing	Make sure your Bluetooth device is "On" and in the Pairing mode. When iHome iB88 appears on your devices menu, select it to complete pairing.
Reset Bluetooth	Press and hold the ">>" button for 6 seconds until you hear a long beep and the headphones power OFF to reset headphones.
Play / Pause	Short press the MFB to start playback. Short press to pause playback. Short press to resume playback.
Skip to next track	Press the >> button during playback
Skip to beginning of current track or go to the previous track.	Press the << button playback
Increase volume	Press and hold the "+" button during playback
Decrease volume	Press and hold the " - " button during playback
Answer an incoming phone call	Short press the MFB when you hear the incoming ring sound. NOTE: Music will automatically pause when you are answering a call and resume when you end the call.
Decline an incoming phone call	Press and hold the MFB for 2 seconds to decline the incoming call.
End a call	Short press the MFB to end the call and "hang up".
Transfer a call between the phone and the headphones	While the call is in progress press & hold the MFB 2 seconds to transfer the call between the phone and the headphone.
Last number redial	When phone is paired with headphone but no call is in progress, double press the MFB to redail the last number
Answer second call/ call waiting	Double press the MFB to place current call on hold and answer an incoming 2nd call. Double press again as needed to switch between calls.
Turn headphones "Off"	Press and hold the MFB for 3 seconds until your hear the "Power Off" prompt and LED indicator shuts off.
Siri/Google Voice function	Press and hold the "<<" button for 3-4 seconds

9. Auxiliary Input Jack

The auxiliary input jack allows you to use your iB88 Bluetooth headphones as normal headphones so that you can listen to music on any non-Bluetooth device that is equipped with a 3.5mm headphone jack.

You may use the mic/control dongle on the auxiliary cable (not included) to answer phone calls and to control music playback functions. The actual function of the control dongle will vary depending on your smartphone.

Your iB88 headphone will automatically switch to the Power 'Off' mode when the Aux-in cable is connected. Use the volume and track navigation controls on your smartphone/music player as your would with any normal headphone.

TROUBLESHOOTING

1. Reception is noisy or intermittent
Make sure that the headphones and the paired device are within the Bluetooth operating range of approximately 33-feet. Make sure the headphones are fully charged as well.

2. No Sound
Make sure that your headphones are properly paired and connected with your Bluetooth enabled smartphone or music player. Refer to the "Pairing" instructions in this manual and in the manual supplied with your phone or music player if necessary.
The rechargeable battery in your headphones may be exhausted and need to be recharged. Refer to the "Charging Your Headphones" instructions in this manual.

3. Unable to Pair/Connect
The pairing settings between the headphones and your smartphone or music player may have been erased or deleted. Follow the "Pairing" instructions in this manual to re-pair and reconnect the devices. Turn off any other Bluetooth devices that are not being used to reduce external interference.

4. Some Functions Do Not Work
Your specific model of smartphone may not support some of the functions described in this manual. Refer to the manual supplied with your phone for further information.

CARE AND MAINTENANCE

Always remember to turn your headphones off if they will not be used for a long period of time. Do not expose your headphones to extremely hot or cold temperatures for extended periods. Do not expose them to direct sunlight or leave them in places such as the dashboard of your car on a hot day. Prevent water or any other liquids from entering the cabinets of your headphones.

Protect Your Hearing
Using these, or any headphones at high volume levels for long periods can result in permanent hearing damage. Always start listening with volume controls on your headphones and your paired smartphone or music player at a low level and then gradually increase the volume controls to a comfortable listening level.

Important Notes
- It is dangerous and illegal (in some jurisdictions) to use headphones when you are driving a car, riding a bike or motorcycle, or operating a watercraft. Be aware of local laws and regulations.
- Do not use these headphones in situations where they might cause distractions or prevent you from hearing warning sounds.
- There are no user serviceable parts in these headphones. Do not attempt any service or repairs on your own. Refer to the warranty for service, repair or replacement information.

FCC Information

LIMITED 1 YEAR WARRANTY